



# EUROPEAN SOUTHERN OBSERVATORY

Organisation Européenne pour des Recherches Astronomiques dans l'Hémisphère Austral  
Europäische Organisation für astronomische Forschung in der südlichen Hemisphäre

ESO - European Southern Observatory  
Karl-Schwarzschild Str. 2, D-85748 Garching bei München

---

## Very Large Telescope Paranal Science Operations VIMOS User Manual

Doc. No. VLT-MAN-ESO-14610-3509

Issue 82, Date 22/06/2008

G. Marconi, S. Bagnulo, M. Rejkuba  
Prepared .....

Date

Signature

A. Kaufer  
Approved .....

Date

Signature

O. Hainaut  
Released .....

Date

Signature

This page was intentionally left blank

### Change Record

Issue/Rev.	Date	Section/Parag. affected	Reason/Initiation/Documents/Remarks
draft	Oct 24, 2002	all	Draft delivered by VIRMOS Consortium first release for P71 (phase II) and P72 (Phase I)
1.0	Feb 11, 2003	all	
1.1	July 14 2003	all	release for P72 (phase II) and P73 (Phase I)
1.2	Jan 12, 2004	all	release for P73 (phase II) and P74 (Phase I)
1.3	Jun 14, 2004	all	release for P74 (phase II) and P75 (Phase I)
5.0	Nov 26, 2004	all	release for P75 (phase II) and P76 (Phase I)
76.0	Mar 21, 2005	2.7; 3.5.7; 3.6.6; 3.7.7	release for P76 (Phase I)
76.1	June 30, 2005	2.1;2.2;2.3;2.6;3.4; 3.5;3.6;3.7;4.6	release for P76 (Phase II)
77.0	Aug 31, 2005	3.6.1, 3.7.2	release for P77 (Phase I)
77.2	Dec 01, 2005	Appendix	release for P77 (Phase II)
78.0	Mar 01, 2006	none	release for P78 (Phase I)
78.1	Jun 06, 2006	all	release for P78 (Phase II)
79.0	Aug 23, 2006	front page and fonts	release for P79 (Phase I)
79.1	Dec 13, 2006	Added clarifications about instrument FoV (Phase II)	release for P79 (Phase II)
80.0	Feb 28, 2007	Calibration plan on sky	release for P80 (Phase I and II)
81.0	Aug 31, 2007		release for P81 (Phase I and II)
82.0	Mar 05, 2008		release for P82 Phase I
82.1	Mar 05, 2008		release for P82 Phase I and II

This page was intentionally left blank

# Contents

<b>1</b>	<b>Introduction</b>	<b>1</b>
1.1	Scope	1
1.2	More Information on VIMOS	1
1.3	Contact Information	1
1.4	Period of Validity of this Manual	1
1.5	Version notes, change track	2
1.5.1	Version 78.1	2
1.5.2	Version 79.0	2
1.5.3	Version 79.1	2
1.5.4	Version 80.0	2
1.5.5	Version 82.0	2
1.5.6	Version 82.1	2
1.6	Acknowledgments	2
<b>2</b>	<b>Instrument Characteristics</b>	<b>4</b>
2.1	Overview	4
2.1.1	Instrument modes	5
2.2	Imaging	6
2.2.1	IMG mode: orientation of the field of view	6
2.2.2	Image Quality	6
2.2.3	Imaging Filters	7
2.3	Multi-Object Spectroscopy (MOS)	7
2.3.1	Spectral range	9
2.3.2	Spectral resolution	9
2.3.3	Multiplex characteristics	9
2.3.4	MOS mode: orientation of the field of view	10
2.4	Integral Field Unit (IFU)	10
2.4.1	IFU mode: orientation of the field of view	11
2.4.2	Fiber arrangement and spatial characteristics	11
2.4.3	Spectral range	13
2.4.4	Spectral resolution	13
2.4.5	Multiplex characteristics	13
2.5	Detectors	13
2.5.1	Detector read-out modes	14
2.5.2	Controllers	15
2.5.3	Read-out noise and conversion factor	15
2.5.4	Fringing	16
2.5.5	Shutters	16
2.5.6	More information	16

2.6	Calibration Units . . . . .	16
2.7	Flexures . . . . .	16
<b>3</b>	<b>Observing with VIMOS</b>	<b>17</b>
3.1	Interaction with the telescope . . . . .	17
3.1.1	Guide stars and Guidecam software tool . . . . .	17
3.1.2	Guide Stars: Policy . . . . .	19
3.1.3	Cumulative offsets . . . . .	19
3.1.4	Telescope and Instrument Focus . . . . .	19
3.2	Atmospheric Dispersion . . . . .	19
3.3	Fringing and Flexures . . . . .	20
3.4	Imaging (IMG) . . . . .	21
3.4.1	Pre-imaging . . . . .	21
3.4.2	Science imaging . . . . .	22
3.4.3	IMG mode: calibration plan . . . . .	22
3.4.4	IMG mode: pipeline . . . . .	22
3.4.5	IMG mode: Exposure Time Calculator . . . . .	22
3.5	Multi-Object Spectroscopy (MOS) . . . . .	23
3.5.1	Pre-imaging . . . . .	23
3.5.2	Rotator on sky . . . . .	23
3.5.3	VIMOS Mask Preparation Software (VMMPS) . . . . .	23
3.5.4	Finding charts . . . . .	25
3.5.5	Visitors using MOS . . . . .	25
3.5.6	MOS mode: grism+filter setup . . . . .	25
3.5.7	MOS mode: attached night time calibrations . . . . .	25
3.5.8	MOS mode: calibration plan . . . . .	25
3.5.9	MOS mode: pipeline . . . . .	26
3.5.10	MOS mode: Exposure Time Calculator . . . . .	26
3.6	Integral Field Unit (IFU) . . . . .	26
3.6.1	Acquisition accuracy . . . . .	26
3.6.2	Dithering/jitter pattern . . . . .	26
3.6.3	IFU mode: grism + filter setup . . . . .	27
3.6.4	IFU mode: attached night time calibrations . . . . .	27
3.6.5	IFU mode: calibration plan . . . . .	27
3.6.6	IFU mode: pipeline . . . . .	27
3.6.7	IFU mode: Exposure Time Calculator . . . . .	27
3.7	VIMOS overheads . . . . .	27
<b>4</b>	<b>VIMOS templates</b>	<b>29</b>
4.1	Introduction . . . . .	29
4.2	Template names . . . . .	29

4.3	Things to know - Reminder	29
4.4	List of templates	29
4.5	Acquisition templates	30
4.5.1	VIMOS_img_acq_Preset	30
4.5.2	VIMOS_mos_acq_Mask	32
4.5.3	VIMOS_mos_acq_Standard	33
4.5.4	VIMOS_ifu_acq_Preset	34
4.6	Science templates	36
4.6.1	VIMOS_img_obs_Offset	36
4.6.2	VIMOS_mos_obs_Offset	37
4.6.3	VIMOS_ifu_obs_Offset	38
4.7	Calibration Templates	40
4.7.1	VIMOS_img_cal_Photom	40
4.7.2	VIMOS_img_cal_Astrom	40
4.7.3	VIMOS_mos_cal_NightCalib	41
4.7.4	VIMOS_mos_cal_Standard	41
4.7.5	VIMOS_ifu_cal_Specphot	42
4.7.6	VIMOS_ifu_cal_NightCalib.	43
<b>A</b>	<b>VIMOS Filters</b>	<b>44</b>
<b>B</b>	<b>VIMOS Grisms</b>	<b>45</b>
<b>C</b>	<b>Template Signature Files for Observation and Acquisition.</b>	<b>53</b>
C.1	Acquisition Templates	53
C.2	Observation Templates	54
C.3	Template Signature Files for Calibrations	54
<b>D</b>	<b>Abbreviations and Acronyms</b>	<b>58</b>

# 1 Introduction

## 1.1 Scope

The VIMOS User's Manual is intended to provide information on the following topics:

- Overall description of the instrument (Sect. 2)
- Observing with VIMOS (Sect. 3)
- Observing and calibration templates (Sect. 4)

## 1.2 More Information on VIMOS

All VIMOS Manuals are available on the VIMOS instrument WEB pages together with the most updated informations on the instrument:

<http://www.eso.org/instruments/vimos/>

Information and software tools for the preparation of service and visitor mode observations with VIMOS are available at:

<http://www.eso.org/observing/p2pp/ServiceMode.html>

<http://www.eso.org/observing/p2pp/VIMOS/VIMOS-P2PP.html>

In particular, information concerning mask preparation with VMMPS and guide star selection with Guidecam is given in the following additional manuals:

[VVMPS](#)

[Guidecam](#)

Visiting astronomers will find further instructions on the Paranal Science Operations WEB page and the Paranal Observatory home page:

<http://www.eso.org/paranal/>

<http://www.eso.org/paranal/sciops/>

## 1.3 Contact Information

In case of specific questions related to Service Mode observations and proposal preparation please contact the ESO User Support Department:

[usd-help@eso.org](mailto:usd-help@eso.org)

For visitor mode observations please contact the Paranal Science Operations Team:

[paranal@eso.org](mailto:paranal@eso.org)

## 1.4 Period of Validity of this Manual

This manual is valid for Phase I and II preparation of Period 82.

## 1.5 Version notes, change track

The first edition of this User Manual was delivered by the VIRMOS Consortium (P.I.: O. Le Fèvre).

### 1.5.1 Version 78.1

Version 78.1 contains more detailed and accurate information about the spectral range that can be observed in spectroscopic modes (MOS and IFU) with the various grisms. Table 11 has been updated. Hyperlinks have been added to the text. The various sections of the manual have been re-arranged. All changes by S. Bagnulo and M. Rejkuba, comments received by G. Marconi and L. Christensen.

### 1.5.2 Version 79.0

VIMOS manual has been ported to the standard format for VLT manuals. Changes by S. Bagnulo

### 1.5.3 Version 79.1

Substantial changes to the description of the instrument field of view. Changes by S. Bagnulo and M. Rejkuba. Dr. S.L. Morris is acknowledged for having improved Fig. 5. An error in Table 5 has been corrected.

### 1.5.4 Version 80.0

Some changes in the night time calibration plan

### 1.5.5 Version 82.0

Just version bump for P82 Phase I preparation.

### 1.5.6 Version 82.1

Just version bump for P82 Phase II preparation.

## 1.6 Acknowledgments

The following institutes have participated to the development of VIMOS:

- Laboratoire d'Astrophysique de Marseille, Marseille, France
- Observatoire de Haute-Provence, Saint-Michel l'Observatoire, France
- Laboratoire d'Astrophysique de l'Observatoire Midi-Pyrénées, Toulouse, France
- Osservatorio Astronomico di Capodimonte, Napoli, Italy
- Istituto di Fisica Cosmica e Tecnologie Relative, Milano, Italy

- Osservatorio Astronomico di Brera, Milano, Italy
- Istituto di Radioastronomia, Bologna, Italy
- Osservatorio Astronomico di Bologna, Bologna, Italy

Table 1: VIMOS opto-mechanical characteristics

Instrument Location	Nasmyth B VLT-UT3 (Melipal)
Opto-mechanical layout	4 beams, each a complete focal-reducer, F/1.88 output
Wavelength coverage	0.37 to 1 microns
Detectors	$4 \times 2048 \times 4096$ , $15 \mu\text{m}/\text{pixel}$
Spectral Resolution	$R = 180$ to $2500$ (1 arcsec slit)
Filters	10 per channel, $U'BVRIz$ , OS-red, OS-blue, GG435, GG475, 170mm diameter
Grisms	6 per channel, LR red, LR blue, MR, HR blue, HR orange, HR red <sup>[1]</sup>
Flexures	Passive compensation, motion of $\pm 2$ pixels over $360^0$ rotation
Masks	15 masks simultaneously loaded in instrument at maximum (per channel) <sup>[2]</sup> . Slits of any position and shape, width $> 0.6''$ , length $< 30''$ .
Multiplex	840 simultaneous slits, $10''$ long at $R = 200$ 210 simultaneous slits, $10''$ long at $R = 2000$ - $2500$
Integral Field Unit	$54'' \times 54''$ field, 6400 fibers with $0.67''$ sampling $27'' \times 27''$ field, 6400 fibers with $0.33''$ sampling

<sup>[1]</sup> From October 2005, a set of four new and more efficient HR red VPHG grisms is installed and available in the 4 channels.

<sup>[2]</sup> Some restrictions apply in operations; currently the number of masks that can be mounted at the instrument cabinet is 8. Please refer to the VIMOS web pages for updates.

## 2 Instrument Characteristics

### 2.1 Overview

VIMOS is the **V**isible **M**ulti-**O**bject **S**pectrograph for the **V**ery **L**arge **T**elescope (VLT) of the **E**uropean **S**outhern **O**bservatory (ESO). This instrument has been built to provide the ESO community with a wide field spectrograph with high throughput and multiplex, dedicated to deep surveys.

VIMOS operates in the  $0.37$ – $1.0 \mu\text{m}$  domain in three main observing modes: direct imaging (IMG), multi-slit spectroscopy (MOS), and integral field spectroscopy (IFU). Because of the large field of view, VIMOS optical path is split into four channels. The four quadrants of the instrument are operated in parallel (i.e., it is not possible to mix modes or filters or grisms between quadrants).

The field of view of the four channels is  $4 \times 7' \times 8'$  in IMG and MOS and up to  $54'' \times 54''$  in IFU mode in low resolution spectroscopy. It provides an image scale of  $0.205''/\text{pixel}$  in MOS and  $0.67''/\text{resolution element}$  in IFU mode. Each of the 4 channels has a  $2048 \times 4096$  pixels EEV CCD, with the 4k pixels being used along the dispersion to maximize the spectral coverage. VIMOS is installed on the Nasmyth B focus of UT3 (Melipal). The VIMOS mechanical and optical characteristics are summarized in Table 1.

A schematic opto-mechanical layout is shown in Fig. 1.

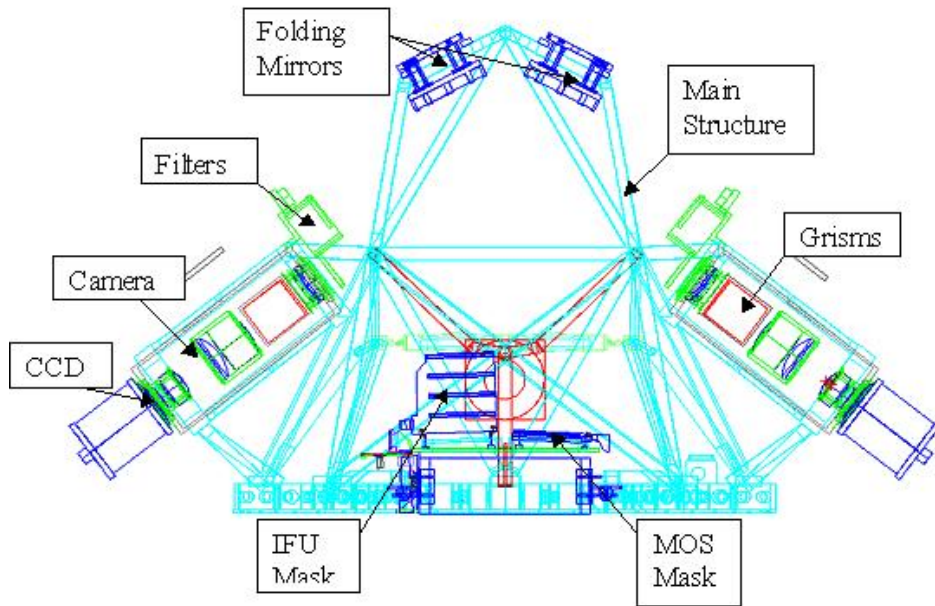


Figure 1: VIMOS Opto-Mechanical layout

- The focal plane is divided in 4 identical channels and is equipped with: the mask exchange units (MEU) which host up to 15 pre-punched masks for MOS spectroscopy per quadrant; the IFU fiber-head, and the IFU masks.
- The folding mirror section hosts the four folding mirrors and the flexure compensators.
- The Filter/Camera Section: the beam section hosts optical analyzers (filters and/or gratings), the camera, and the exposure shutter in front of the CCD.
- FEU: the filter exchange units (one for each channel) are located below the main body of the instrument below the Filter/Camera Section; each unit hosts a juke-box of 10 filters permanently mounted.
- GEU: the grism exchange units are located below the Filter/Camera Section; they host a carousel of six gratings permanently mounted.

### 2.1.1 Instrument modes

VIMOS offers the following modes for observations:

- Imaging (IMG) (see Sect. 2.2)
- Multi-Object Spectroscopy (MOS) (see Sect. 2.3)
- Integral Field Spectroscopy (IFU) (see Sect. 2.4)

IMG mode uses broadband filters  $U'BVRIz$ . MOS and IFU modes share the set of gratings and order sorting filters given in Table 3. In MOS mode, a set of four laser punched masks

Table 2: VIMOS Imaging characteristics and performance

Field of view	4×7' × 8' separated by 2' gaps illuminated CCD area: 2048 × 2350 pix <sup>2</sup> slightly vignettted on the corners outside 8'
Pixel scale	0.205"/pixel
Image Quality	80 % encircled energy in 0.4" within the whole field
Filters	U', Bessel BVRI, Gunn z (see section A)
F-ratio	1.88
Limiting Magnitudes in 1h	V=27.7 I=26.6 5σ detection for a point source V=26.5 I=25.4 5σ detection in 3" for a galaxy

made of INVAR is inserted in the focal plane. In IFU mode, fibers are arranged along pseudo-slits in the so-called “IFU masks”. IFU masks may be inserted in the instrument focal plane (in the same position as occupied by the INVAR masks in the MOS mode). The spectral characteristics of the two spectroscopic modes are therefore similar, but not identical.

## 2.2 Imaging

Direct imaging is used to produce wide field images (VIMOS is the largest imager on the VLT) using broad band filters. This mode has two functions: produce science images, and produce the mandatory pre-images needed to prepare masks (see Sect. 3).

Table 2 summarizes the main characteristics of the imaging mode.

### 2.2.1 IMG mode: orientation of the field of view

Figure 2 shows the orientation of the instrument field of view. At 0° rotator angle the  $x$  axes of the CCDs are oriented E and the  $y$  axes are oriented N (top panels). Increasing rotator angle moves the compass counterclockwise. At 90° rotator angle the  $x$  axes are oriented S and the  $y$  axes are oriented E (bottom panels). Note that position angle increases as rotator angle. Figure 3 shows the instrument FoV keeping fixed the detectors with  $x$  axes increasing to the right, and  $y$  axes increasing to the top. Top right panels refer to the situation with the rotator at 0°, and bottom right panels refer to the situation with rotator at 90°. The corresponding positions of the detectors on sky are shown in the left panels.

The gap between the quadrants is approximately 2'. The pointing coordinates correspond approximately to the center of the gap.

### 2.2.2 Image Quality

For the most updated information please have a look at the Quality Control and Data Flow Operations [Web pages](#).

The focal plane of VIMOS is not strictly flat because of the complexity of the optical elements involved. This results in slight focus variations across the field, which translates in a variable PSF from the center to the periphery. The sky concentration effects are in any case small and negligible for flat-field and photometric calibrations.

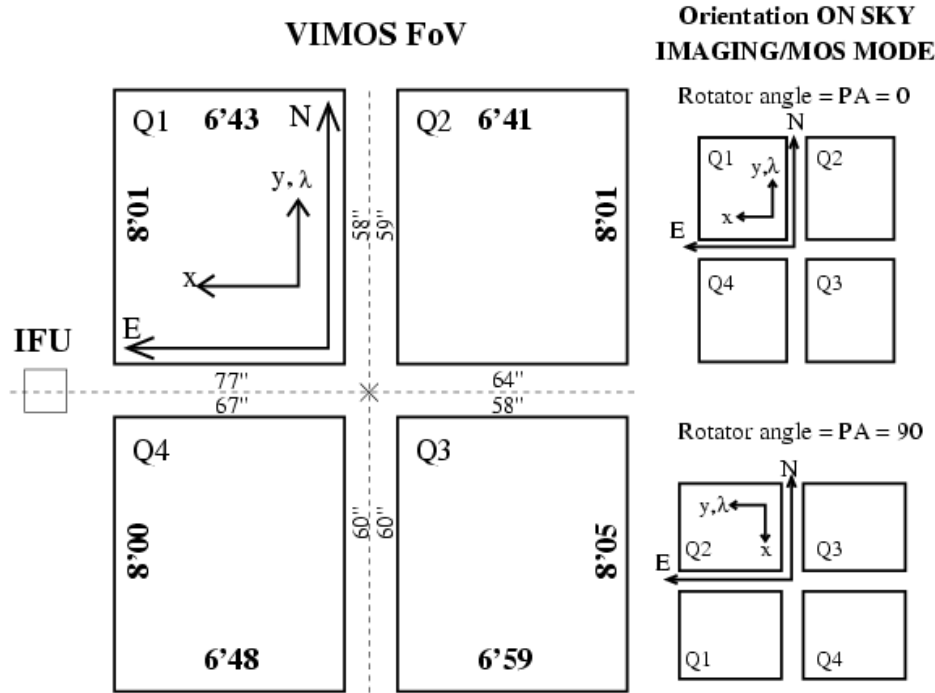


Figure 2: Orientation of the VIMOS field of view on sky for position angles  $0^\circ$  and  $90^\circ$ , in IMG and MOS mode.

### 2.2.3 Imaging Filters

VIMOS provides positions for 10 broadband filters in any of the four channels. Presently installed filters inside the instruments are  $U'$ , Bessel  $BVRI$ , Gunn  $z$ , and some order separation filters. Only the  $U'BVRIz$  filters are available for imaging programmes. The special  $U'$  is not a standard Bessel filter (see Figure 14). With the Bessel  $I$  and Gunn  $z$  filters the CCDs show fringes of approximately 7%.

The complete list of filters together with the transmission curves are presented in Appendix A (see Table 16, and Figs. 14 to 17).

ESO will not accept requests for user's supplied filters for VIMOS.

## 2.3 Multi-Object Spectroscopy (MOS)

A variety of gratings with different wavelength ranges and dispersions is available in MOS mode. Order separating filters are available to eliminate the overlap, *for a given slit*, between orders 1 (the order used for science) and order 2 (always present on the detector). This is done by restricting the wavelength range of a particular grating to less than one octave in wavelength. The 0th order contamination is present only in multi-layered mode, i.e., when observing with the LR and the MR gratings.

Table 3 indicates the recommended and allowed grating + filter combinations. **Any other combinations of gratings and filters should be requested with a waiver.** Defining in the OBs combinations not allowed and for which a waiver was not requested will result in these OBs being rejected by the User Support Department.

ESO will not accept requests for user's supplied gratings or filters for VIMOS.

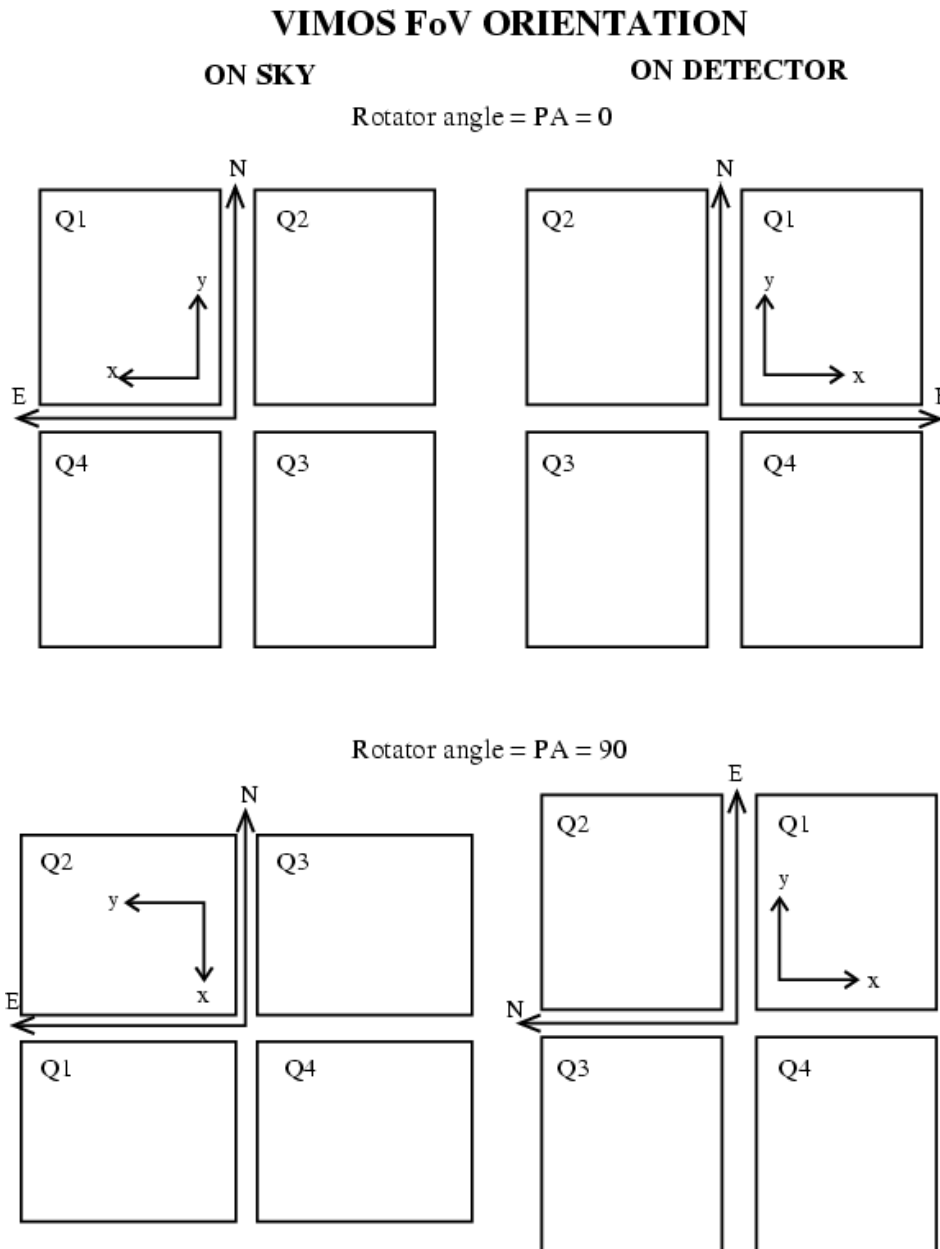


Figure 3: A comparison of the orientation of the VIMOS field of view as seen on sky (left panels) and on detector (right panels) for position angles 0° and 90°, in IMG and MOS mode.

Table 3: Standard grism / filter combinations for MOS and IFU modes

Grism	Filter	
	Default	Allowed
LR blue	OS-blue	Free
LR red	OS-red	Free
MR	GG475	OS-red, OS-blue <sup>1</sup>
HR blue	Free	–
HR red	GG475	–
HR orange	GG435	–

<sup>1</sup> The grism-filter configuration MR+OS-blue is not supported by the pipeline

Transmission curves are available in Appendix A for the filters, and Appendix B for the grisms. Table 4 shows the spectral range covered in MOS modes by the various grisms, as obtained by the automatic pipeline when reducing the spectrophotometric standard star. This spectral range is valid for slits close to the center of the field.

### 2.3.1 Spectral range

In MOS mode, slits can be positioned at any position in the imaging field of view. With high-resolution grisms, the observed spectral range changes slightly according to the position of the slit. Table 5 shows the spectral ranges covered by the detector for each grism (and default order sorting filter) for the slits located at three different positions in the field of view. With low resolution grisms, the spectral coverage is independent of the position of the slit.

### 2.3.2 Spectral resolution

The spectral resolution obtained with a 1" slit width with the various grisms is given in Table 4.

### 2.3.3 Multiplex characteristics

A particular feature of the MOS mode is the possibility of stacking multiple layers of slits along the dispersion direction. This is only possible with the low resolution grisms (up to four slits along the dispersion direction) and the intermediate resolution grisms (up to two slits), for which the spectra are short enough (in number of pixels) to allow stacking. With the high-resolution grisms, only one slit can be placed along the dispersion direction.

However, please note that in the multi-layer mode there is some order overlap: the second order of one slit may overlap with the first order of the adjacent slit. There is also 0<sup>th</sup> order contamination between different layers of slits.

For faint objects, order overlap is usually not a problem: only the sky will contribute significantly to the overlap, with a contribution that cannot be distinguished from the first order. This however constrains the positioning of the slits in the focal plane: stacked slits along the dispersion direction have to be strictly parallel and of the same length to allow the second orders to overlap nicely with the first order of the adjacent slits.

With the low-resolution grisms, the use of *no filter* instead of the default order sorting filters OS-blue and OS-red will result in longer spectra and second order overlap. It is **strongly rec-**

Table 4: MOS: spectral resolution and spectral ranges observed using the mask for spectrophotometric standard stars

Grism	Default Order sorting filter	Spectral range	Number of pixels	Spectral Res. (1" slit)	Dispersion (Å/ pixel)	Spectral multiplex
LR blue	OS-Blue	370-670 nm	550	180	5.3	4
LR red	OS-Red	550-950 nm	550	210	7.3	4
MR	GG475	480-1000 nm	2000	580	2.5	2
MR	OS red	550-970 nm	2000	580	2.5	2
HR blue	Free	415-620 nm <sup>1</sup>	4096	2050	0.51	1
HR orange	GG435	520-760 nm <sup>2</sup>	4096	2150	0.6	1
HR red <sup>4</sup>	GG475	630-870 nm <sup>3</sup>	4096	2500	0.6	1

<sup>1</sup> With HR blue grism the spectral range in quadrant 1 (for a standard star) is 400-620 nm

<sup>2</sup> With HR orange grism the spectral range in quadrant 1 (for a standard star) is 505-745 nm

<sup>3</sup> With HR red grisms the spectral range in quadrant 1 (for a standard star) is 650-865 nm

<sup>4</sup> New HR\_red VPHG grisms have been installed from October 5, 2005.

Table 5: Spectral coverage  $\Delta\lambda$  for three positions of the slit in field of view (MOS mode)

Grism	Order sorting filter	$\Delta\lambda$	$\Delta\lambda$	$\Delta\lambda$
		CCD center	CCD bottom	CCD top
LR red	OS-red	550 - 950 nm	550 - 950 nm	550 - 950 nm
LR blue	OS-blue	360 - 670 nm	360 - 670 nm	360 - 670 nm
MR	GG475	500 - 1000 nm	500 - 1000 nm	500 - 950 nm
HR blue	Free	415 - 620 nm	468 - 674 nm	370 - 566 nm
HR red	GG475	630 - 870 nm	690 - 930 nm	570 - 805 nm
HR orange	GG435	520 - 760 nm	577 - 817 nm	463 - 703 nm

**ommended to reduce the multiplex/number of slits along the dispersion direction** to avoid/reduce multiple overlaps. The multiplex can be reduced by increasing the distance between slits.

### 2.3.4 MOS mode: orientation of the field of view

The orientation of the instrument field of view in MOS mode can be inferred from Figs. 2 and 3, taking into account that not tilted slits are oriented along the  $x$ -axes, and that wavelength dispersion is along the  $y$  axis, with wavelength increasing with  $y$ .

## 2.4 Integral Field Unit (IFU)

The Integral Field Unit (IFU) is a dedicated opto-mechanical system aimed at producing spectra of a contiguous area of up to  $54 \times 54$  arcsec<sup>2</sup>. The sky image is projected onto a micro-lens array with a choice of two spatial samplings (magnifications): 0.33" or 0.67" per resolution element (fibre). Each 2D input micro-lens is coupled to an optical fiber. The output of the fibers is re-arranged on a linear set of micro-lenses to produce an entrance slit to the spectrograph, at the mask focal plane location. Each IFU mask (one for each channel of

## VIMOS IFU ORIENTATION ON SKY

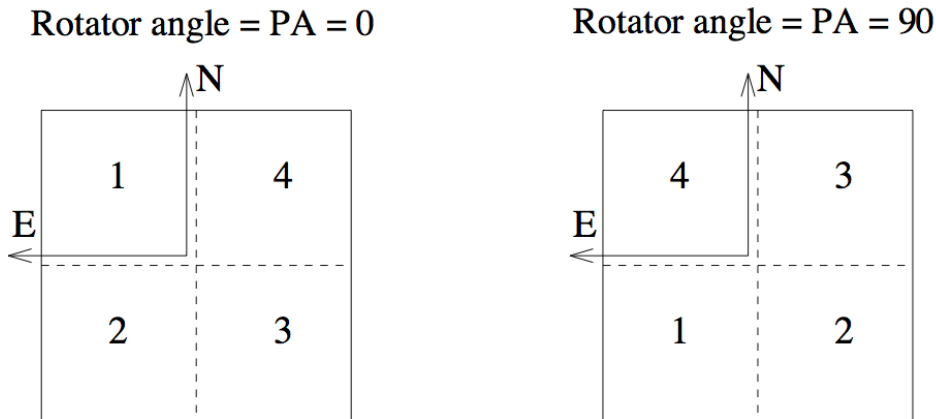


Figure 4: Orientation of the VIMOS IFU field of view on sky for position angles  $0^\circ$  and  $90^\circ$ , in IFU mode.

VIMOS) has a set of 4 fibre-slits (or pseudo-slits), for a total of 6400 fibers.

### 2.4.1 IFU mode: orientation of the field of view

Figure 4 shows the orientation of the instrument field of view in IFU mode for the four quadrants. On the detectors, wavelength dispersion is along the  $y$  axis, with wavelength increasing with  $y$ . The increasing position angle on the sky (east of north) corresponds to the positive rotator angle. Spatial characteristics are described in the Section below.

As for IMG/MOS modes, the pointing coordinates in the header correspond to the center of the VIMOS field of view. Due to offset position of IFU with respect to the center, the relevant header keywords which contain the information of the pointing of the IFU are "HIERARCH ESO TEL TARG ALPHA" and "HIERARCH ESO TEL TARG DELTA".

### 2.4.2 Fiber arrangement and spatial characteristics

The special arrangement of fibers for VIMOS IFU head is shown in Fig. 5. The fibers numbering has been arranged following the scheme: mask - line - module - fiber (i.e. 4 - B - 5 - 67). The arrangement of the fibers into the 4 pseudo-slits mask (one for each channel) is reported in Fig. 6. The detailed IFU table is distributed to the users together with the data release.

A masking-shutter (IFU shutter) is provided in front of the input micro-lens array; this allows the exclusive use of the central  $1/4^{\text{th}}$  of the field when IFU is used with intermediate and high spectral resolution grisms. In this configuration, only 1 fiber-slit per quadrant (mask) is used, for a total of 1600 fibers. The templates for IFU mode offer the option to insert a shutter to limit the field to the central part also for low resolution grisms. When small field can be accommodated, this avoids second order contamination by the sky or background objects from the 3 pseudo-slits corresponding to the outer part of the field of view.

Table 6 shows the spatial characteristics of the IFU mode.

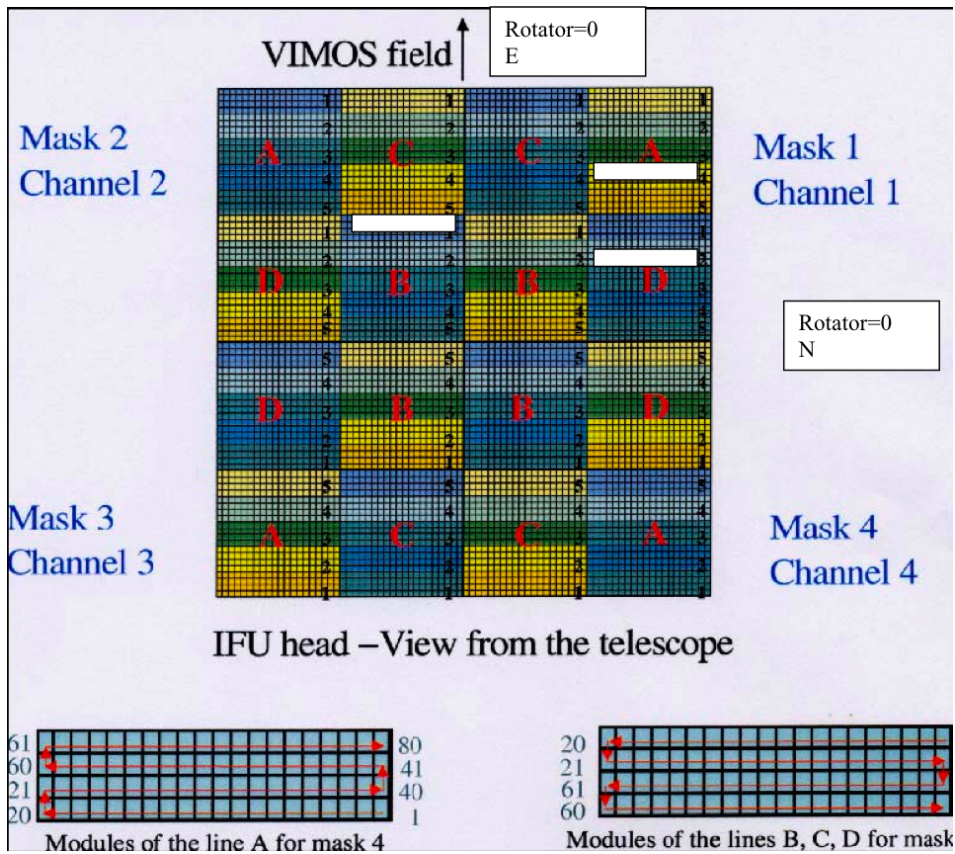


Figure 5: IFU head: details of the fiber modules. Low transmission fiber blocks are marked with white rectangles. For rotator angle = 0°, North is to the right, East to the top.

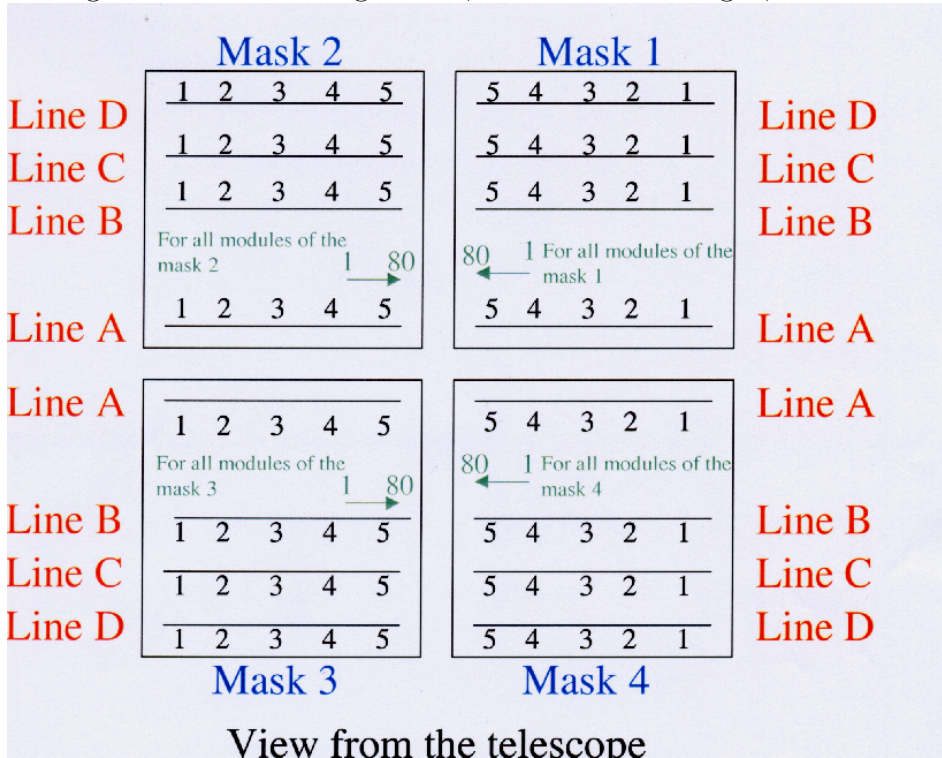


Figure 6: IFU mode: fibers numbering on the masks

Table 6: Integral Field Unit: spatial characteristics

Grism	Shutter	Spatial sampling (arcsec/fibre)	Field of view arcsec <sup>2</sup>	Number of fibres	Pseudo-slits per quadrant
LR blue, LR red	OFF	0.67"/fibre	54" x 54"	80 x 80	4
LR blue, LR red	ON	0.67"/fibre	27" x 27"	40 x 40	1
LR blue, LR red	OFF	0.33"/fibre	27" x 27"	80 x 80	4
LR blue, LR red	ON	0.33"/fibre	13" x 13"	40 x 40	1
MR, HR blue, HR orange, HR red	ON	0.67"/fibre	27" x 27"	40 x 40	1
MR, HR blue, HR orange, HR red	ON	0.33"/fibre	13" x 13"	40 x 40	1

### 2.4.3 Spectral range

Table 7 shows the spectral range covered in IFU modes by the various grisms, as obtained by the automatic pipeline when reducing the spectrophotometric standard star.

With low and intermediate resolution grisms the spectral coverage is independent of the position of the IFU pseudo-slits. With the high-resolution grisms, the spectral coverage is determined also by the (fixed) positions of the pseudo-slits in the focal plane, but it varies slightly from quadrant to quadrant. The spectral coverage for each quadrant derived from the automatic reduction of standard star observations with VIMOS pipeline is listed in the Table 8.

### 2.4.4 Spectral resolution

In IFU mode, spectral resolution is fixed by the combination grism + fiber size (the fiber FWHM is about 3.2 pixels, corresponding to 0.67"). The spectral resolution is about 1.25 times the spectral resolution obtained in MOS mode with a 1" slit width. The spectral resolution for various grism+filter combinations is given in Table 7.

### 2.4.5 Multiplex characteristics

The same multiplex capability described in MOS mode is also used in IFU mode. With the low-resolution grisms there are 4 pseudo slits of fibers along the dispersion direction. With intermediate and high-resolution grisms only the central pseudo-slit is used (in practice by masking the entrance field of the IFU so that the other pseudo-slits do not receive sky light).

## 2.5 Detectors

The detector mosaic of VIMOS consists of four 2k×4k EEV44 CCDs, thinned and back side illuminated.

Table 9 indicates the basic characteristics of the VIMOS CCDs. Figure 7 shows the quantum efficiency curve of one of the CCDs.

Table 7: Spectral characteristics in IFU mode

Grism	Default Order sorting filter	Spectral range common to all quadrants	Spectral Res. (1" slit)	Dispersion (Å / pixel)	Spectral multiplex
LR blue	OS-Blue	400-670 nm	220	5.3	4
LR red	OS-Red	590-915 nm	260	7.3	4
MR	GG475	490-1015 nm	720	2.5	1
HR blue	None	415-620 nm	2550	0.51	1
HR orange	GG435	525-740 nm	2650	0.6	1
HR red	GG475	645-870 nm	3100	0.6	1

**Note:** new HR red VPHG gratings have been installed for October 5, 2005.

Table 8: IFU: spectral coverage in the various quadrants

Grism	Q1	Q2	Q3	Q4
LR blue + OS blue	390 - 670 nm	395 - 675 nm	400 - 680 nm	400 - 680 nm
LR red + OS red	570 - 915 nm	580 - 930 nm	590 - 930 nm	585 - 930 nm
MR + GG475	485 - 1015 nm	490 - 1020 nm	490 - 1020 nm	490 - 1015 nm
HR blue + free	415 - 620 nm	415 - 620 nm	415 - 620 nm	415 - 620 nm
HR orange + GG435	525 - 745 nm	525 - 745 nm	525 - 745 nm	525 - 740 nm
HR red + GG475	635 - 860 nm	635 - 865 nm	635 - 860 nm	645 - 875 nm

Table 9: Basic characteristics of the VIMOS CCDs

Parameter	Value
Number of pixels	2048×4096
Pixel size ( $\mu\text{m}$ )	15
Dark current at $-120^\circ\text{C}$ ( $e^-/\text{px}/\text{h}$ )	<7
Deviation from Linearity (Full well; %)	< 0.5
Charge transfer efficiency	>0.999999

### 2.5.1 Detector read-out modes

The CCDs have two read-out ports but only one is used. This increases the read-out time but, as a benefit, the gain, offset, and read-out noise are constant along the entire CCD.

In spectroscopic mode, the full CCDs ( $2048 \times 4096$  pixels<sup>2</sup>) are read-out; in imaging mode, readout is windowed to  $2048 \times 2400$  pixels<sup>2</sup>. In fact, in both spectroscopic mode and in imaging mode, the CCDs are vignettted by some hardware. In spectroscopic mode, the illuminated area is about  $1970 \times 4096$  pixels<sup>2</sup>, and in imaging mode the illuminated area is about  $1970 \times 2300$  pixels<sup>2</sup>. The actual values depend on the individual CCDs.

The default readout modes are indicated in Table 10.

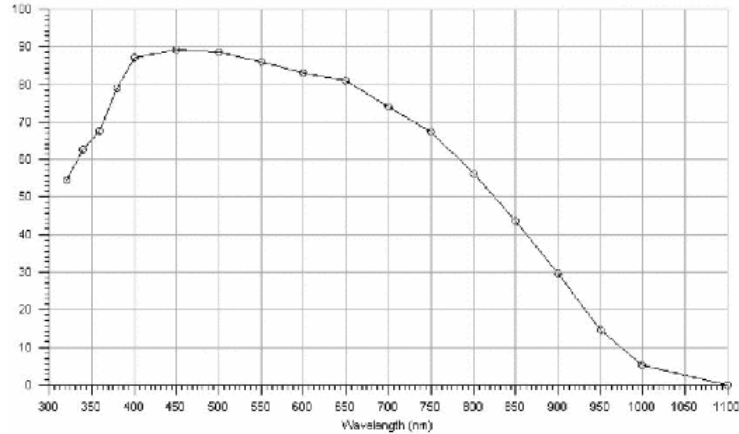


Figure 7: QE curve of one VIMOS CCD

Table 10: Detector Readout Modes and Characteristics

VIMOS Mode	Size	Speed	Binning	Gain	Port	Windowing	Readout time
Imaging	4×2k×2k	225kpx s <sup>-1</sup>	1×1	Low	1-port	Not supported	1 m
Spectroscopy	4×2k×4k	225kpx s <sup>-1</sup>	1×1	High	1-port	Not supported	1 m

## 2.5.2 Controllers

The 4 CCDs are controlled by two FIERA controllers. The detectors of channel 2 and 3 are controlled by FIERA A (VIMOSA), the detectors of channel 1 and 4 by FIERA B (VIMOSB).

## 2.5.3 Read-out noise and conversion factor

Table 11 indicates the readout noise and gain values for the 4 chips. Note that these values are subject to change and are indicated here only for reference. Exact values have to be found in the image headers.

Table 11: Detector read-out noise and conversion factors. For reference only, subject to change

Chip	Read-out Mode	RON [e <sup>-</sup> rms]	K [e <sup>-</sup> /adu]
CCD 1	225 kpx s <sup>-1</sup> , low gain (IMG mode)	5.3	1.70
CCD 2	225 kpx s <sup>-1</sup> , low gain	5.2	1.86
CCD 3	225 kpx s <sup>-1</sup> , low gain	5.3	1.95
CCD 4	225 kpx s <sup>-1</sup> , low gain	4.9	1.80
CCD 1	225 kpx s <sup>-1</sup> , high gain (MOS and IFU modes)	4.3	0.51
CCD 2	225 kpx s <sup>-1</sup> , high gain	4.6	0.56
CCD 3	225 kpx s <sup>-1</sup> , high gain	4.7	0.57
CCD 4	225 kpx s <sup>-1</sup> , high gain	4.3	0.52

RON and conversion factor monitoring is available through the [QC1 WEB pages](#)

### 2.5.4 Fringing

With the  $z$ \_Gunn and Bessel  $I$  filters the fringing amplitude is around 7% in imaging and in spectroscopy the amplitude of fringing is of the order of 7-8% at maximum.

Despite this relatively strong fringing, it is important to note that the structure is quite stable and dithered images taken in a sequence can easily remove the structure (see Sect. 3.3).

### 2.5.5 Shutters

The shutter (one for each CCD camera) guarantees uniform illumination of the CCD to the 1% level or better for exposure times as short as 1 sec (the shortest possible exposure time).

### 2.5.6 More information

More (updated) information on detector characteristics, cosmetics, and performance on sky at:

<http://www.eso.org/projects/odt/>  
<http://www.eso.org/observing/dfo/quality/>

## 2.6 Calibration Units

VIMOS has three calibration units illuminating a calibration screen at the back of the Nasmyth shutter (closing the Nasmyth tunnel).

Each unit has the following lamps:

- Flatfield lamps:
  - QTH10 halogen lamp for imaging screen flats in  $VRIz$ , and MOS spectroscopic screen flats in LR red and blue
  - QTH50 halogen lamp for imaging screen flats in  $U'B$ , MOS screen flats in MR, HR red and blue, and all IFU screen flats
- Arc lamps:
  - He
  - Ar
  - Ne

The updated atlas of the spectral lines for the different grisms can be found at

<http://www.eso.org/instruments/vimos/inst/atlas/index.html>

## 2.7 Flexures

The passive flexure compensation of VIMOS is optimized to reach a reasonable compromise in every position of the Nasmyth rotator. An astatic compensator system is installed in quadrants 2, 3, and 4. Image motion due to instrument flexures under gravity are currently within  $\pm 2$  pixels for the four channels.

See Sect. 3.3 for recommendations on how to deal with fringing and flexures.

## 3 Observing with VIMOS

All observations with VIMOS are done via “observing blocks” (OBs). OBs consist of one acquisition template including target information followed by “observing templates” related to the observing mode. The users will fill out the parameter fields (“keywords”) of the templates (e.g. grisms, filters, etc). All the preparations are done with the Phase II proposal preparation tool `p2pp`.

In addition, VIMOS masks have to be prepared with the VIMOS mask manufacturing preparation software `VVMP`.

The strategy behind observing blocks and templates is to prepare the observations well in advance to minimize any interactive steps during the observations (optimization and service mode compatibility). The execution of the OBs will be mostly automatic and the execution will be done by telescope and instrument operators and staff astronomers. Direct interaction at execution time is only required for the target acquisition and to assess the quality of the data.

The preparation of visitor and service mode observations requires special care, and the relevant documentation should be consulted. See Sect. 1 for instructions on how to retrieve the corresponding information.

### 3.1 Interaction with the telescope

#### 3.1.1 Guide stars and Guidecam software tool

For telescope guiding and active optics correction it is necessary to find a guide star of magnitude in the range 11-13.5 within the Nasmyth field of view. The guide star is picked up by the Guide Probe, which is attached to the telescope *adapter*. (Note that the adapter is independent of the telescope *rotator* to which the instrument is attached.)

In IMG and MOS mode, it is not always possible to find a guide star such that the Telescope Guide Probe is not vignetting the VIMOS field of view. Therefore, users are asked to select the guide star for their observations. The choice of the guide star is **mandatory** for pre-imaging, for imaging, and for MOS programs. In fact, the guide star for MOS is selected at the time of pre-imaging: guide star coordinates and position of guide probe (whether positive or negative) is stored in the pre-image headers, and subsequently propagated by VMMPS (see Sect. 3.5.3), the VIMOS Mask Preparation Software, into the Aperture Definition in Pixel (ADP) files. At the time of the MOS acquisition, this information is extracted from the ADP files and the same guide star as used for pre-imaging will be re-used for the MOS observations. Only in some exceptional cases, the telescope operator may have to select another guide star: see Sect. 3.1.2. Users need not select the guiding star for observations carried out in IFU mode.

The position and the amount of the vignetting introduced in the field of view by the guide probe can be controlled with the help of the `Guidecam` software, that allows one to visualize the geometry of the VIMOS field of view and of the Telescope Guide Probe, and allows users to select the guide star most suitable to their observation.

Figure 8 shows the Guidecam Graphical User Interface displaying the geometry of the VIMOS field of view and the Guide Probe at the Nasmyth focal plane of the telescope.

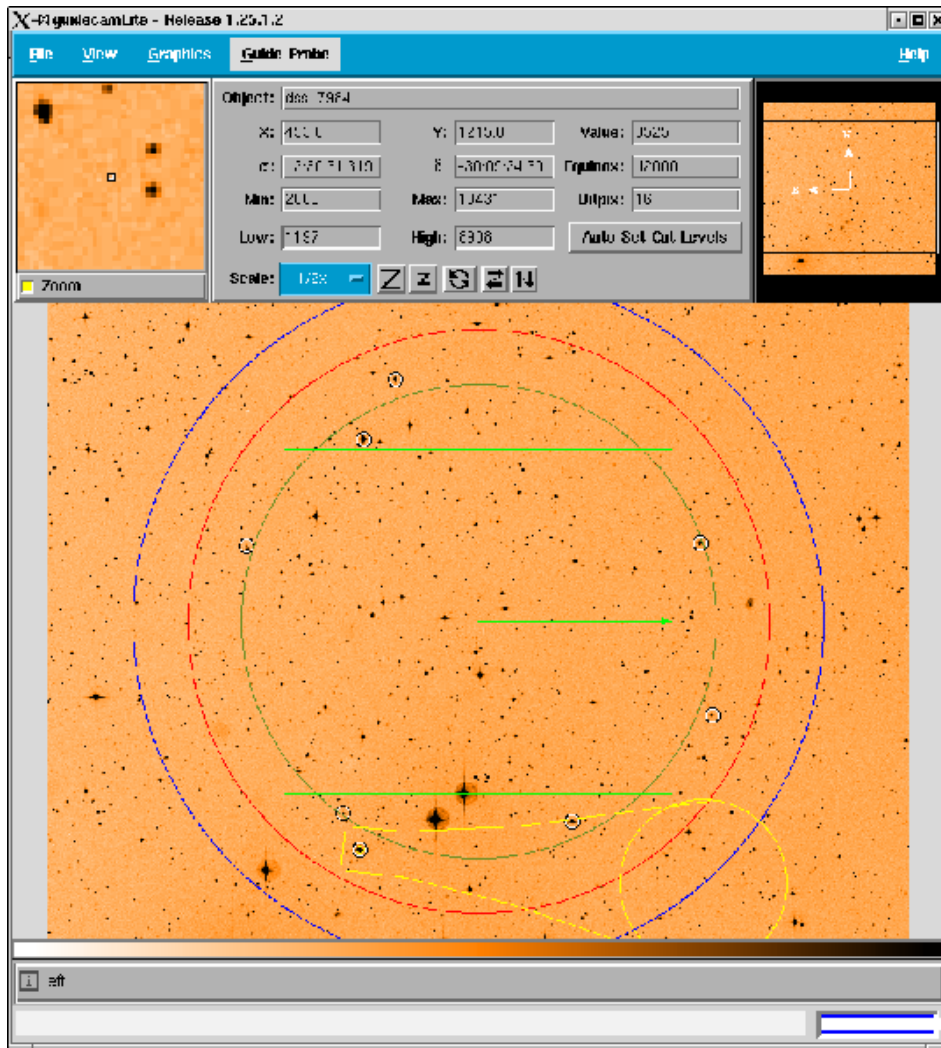


Figure 8: Guidecam Graphical User Interface. Superimposed to the field of view are the VIMOS field of view layout, Guide Probe drawing and USNO selected stars in the field.

### 3.1.2 Guide Stars: Policy

Starting from P72, ESO applies the following policy regarding guide stars:

- Selection of a Guide Star for VIMOS observations is mandatory for MOS and IMG mode, to assess and control the amount and position of vignetting that may be introduced by the Guide Probe; see Phase 2 Web pages for detailed informations.
- If no guide star is provided by the user (i.e. the option **CATALOGUE** of the **Get Guide Star From P2PP** parameter of the VIMOS\_ifu\_acq\_Preset template is selected), the guide star will be selected by the Telescope Operator at execution time.
- If the user provides a guide star (by selecting the option **SETUPFILE** of the **Get Guide Star From P2PP** parameter of the VIMOS\_img\_acq\_Preset template), efforts will be made to use this guide star for imaging, pre-imaging and for the subsequent MOS observations, although this cannot be entirely guaranteed. Observing conditions (seeing, Moon, etc.) may indeed force to select a different guide star than the one selected by the user. In addition, it may happen that a guide star suitable for pre-imaging observations will not be usable for the spectroscopic follow-up if e.g. the seeing has changed.
- It is requested that the users selecting a guide star for their observations use Guidecam to generate the finding chart to be delivered as part of their Phase II material.

### 3.1.3 Cumulative offsets

For small telescope offsets, the telescope may keep the same guide star. However, observations involving cumulative offsets greater than about 30'' often result in significant vignetting of the guide probe, or even in the loss of the guiding star. For these reasons, all dither positions for offset patterns used in the OBs must fit inside a 30'' × 30'' size box. If larger offsets are necessary, users need to prepare separate OBs and use appropriate guide star for each of them.

### 3.1.4 Telescope and Instrument Focus

The telescope focus is automatically set by the active optics system. No intervention is required by the observer. Defocusing of the telescope is not possible during the observations. The instrument focus is corrected automatically for the different thickness of the various filters, and for temperature variations (autofocus).

## 3.2 Atmospheric Dispersion

VIMOS is not equipped with Atmospheric Dispersion Corrector in none of its modes. The impact of atmospheric dispersion will be mostly noticed in MOS mode. In imaging, some image elongation may be noticed at high airmasses in the U or B band. In IFU, the effect will mostly be noticed with the LR.blue grism and with the 0.33''/fiber sampling.

In MOS mode, the effects can lead to severe slit losses if some precautions are not taken. To minimize atmospheric dispersion effects at high airmass, and assuming that the observations are performed close to meridian, the slits need to be oriented N-S, forcing the rotator angle to be set at 90°. This rotator angle is the default one to be used for pre-imaging, and the same rotator angle will be used during spectroscopic follow-up. The VIMOS operational scenario

foresees to carry out MOS observations as close as possible to Meridian, within  $\pm 2$  hrs. Although this represents a major operational constraint, this is the only safe mode to ensure that slit losses are minimized in a systematic way for the blue setups, provided that slits are oriented N-S.

More information and simulations can be found on the [VIMOS web page](#). Figure 9 shows a worst case scenario of MOS observations with LR\_blue (spectral coverage 370 – 670 nm) for a field with declination  $+20^\circ$ .

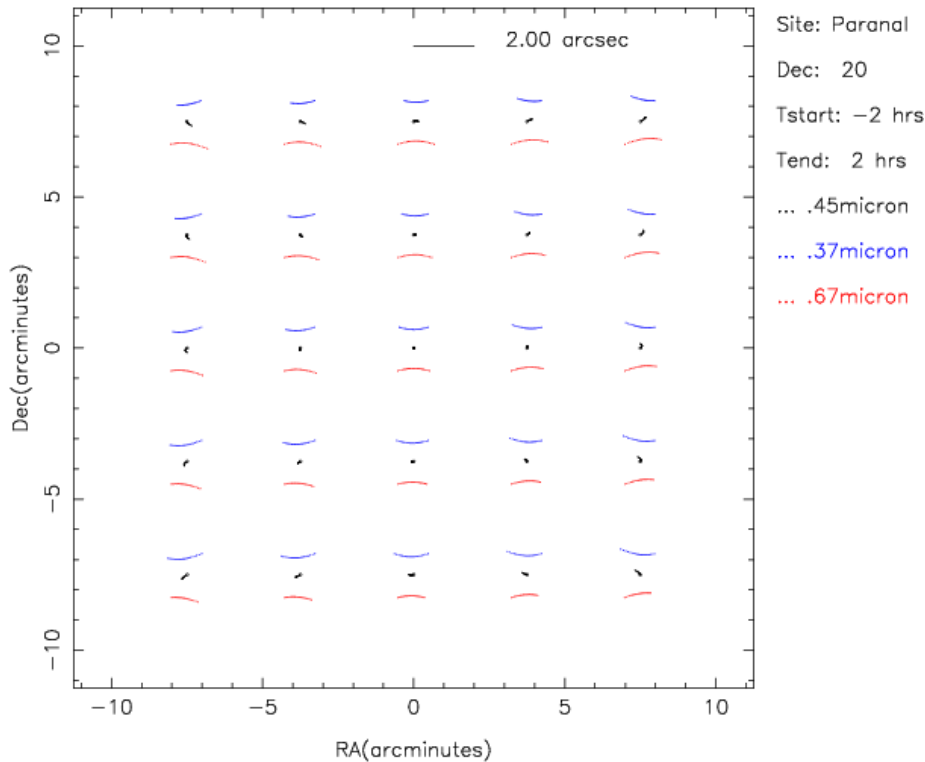


Figure 9: Example of atmospheric dispersion at Paranal for a field at declination  $+20^\circ$ , observed with the LR\_blue grism from  $\pm 2$  hrs from Meridian. The blue and red trails show the evolution of the blue and red wavelengths during the exposure. Atmospheric spectra start with N-E orientation and move to N-W through a N-S orientation while crossing the Meridian. The maximum amplitude of the dispersion is  $\sim 2''$  at  $\pm 2$  hrs from Meridian. Slits clearly have to be oriented N-S as a default orientation to minimize the slit losses, assuming that all MOS observations will be carried out within  $\pm 2$  hrs from Meridian.

### 3.3 Fringing and Flexures

The amount of flexures reported in Sect. 2.7 has a number of operational consequences:

- The accuracy of the slit positions determined from pre-imaging depends on the rotator position. This is for the time being one of the reasons why slit widths narrower than  $0.6''$  are not allowed.
- Accuracy of sky subtraction / flat fielding: due to fringing at red wavelengths, accuracy of sky subtraction / flat fielding may be limited by flexures. With dithering / jittering

sequences, median running sky frames can be built in imaging or spectroscopy allowing accurate sky subtraction and/or flat fielding of the data

- In spectroscopy, arcs and flats are taken during daytime and at constant rotator angle. Depending on the variation in rotator angle between daytime calibrations and night time observations, some flat field residuals and wavelength calibration offsets may be introduced due to the flexures. In order to minimize/eliminate these effects, night time calibrations can be taken with an adequate template (see Sect. 4). **Attached flat and arc calibrations are mandatory for all IFU observations. Attached arcs are mandatory for MOS science observations with grisms LR blue and HR blue, and highly recommended for MOS science observations with grisms MR, HR red, HR orange, and HR red.** Execution time is subtracted from the total allocated time.

## 3.4 Imaging (IMG)

Imaging mode is used for both pre-imaging runs and science imaging runs. In both cases, users are requested to use Guidecam for the selection of guide stars. See Sect. 3.1.1 concerning Guidecam and Sect. 3.1.2 concerning the policy regarding Guide Stars.

### 3.4.1 Pre-imaging

VIMOS pre-imaging is mandatory prior to MOS follow-up. Pre-imaging is carried out in service mode only. The following instructions for preparation of pre-imaging OBs should be strictly followed.

**Program ID** It is mandatory for Phase I to request a specific pre-imaging run in the proposal form, and for Phase II to prepare the pre-imaging OBs by using the corresponding Program ID.

**Filter used** The correction of the distortions is derived from  $R$  filter observations only. To minimize the slit losses due the distortion of the instrument, the use of the  $R$  filter for pre-imaging is mandatory. Pre-imaging with filters other than  $R$  may be requested with a waiver.

**Observation Category: PRE-IMAGE** It is mandatory to set the Observation Category to PRE-IMAGE in the observation template VIMOS\_img\_obs\_Offset (see Sect. 4). Failure to do so will result in delays to process and deliver the pre-imaging data, and may result in MOS observations not being carried out.

**Rotator on sky** The rotator on sky, otherwise called position angle on sky, cannot be freely selected by the user. This is in order to minimize the slit losses due to atmospheric dispersion (Sect. 3.2). The default value assigned to this parameter in P2PP should therefore not be modified. The default value is  $90^\circ$ , and corresponds to an orientation of the field with E to the top, N to the left (see Fig. 2). In *special cases* it may be possible to deviate from these rules *if* there is a valid scientific reason; in that case a waiver must be specifically requested to ESO before you submit your Phase II information.

Table 12: VIMOS Calibration Plan: IMG Mode

Calibration	Number	Frequency	When?	Products	Accuracy	Comment
Bias	5	Daily	Day time	Master Bias	RON	
Darks	3	Monthly	Day time	Dark current		
Sky Flats	5	3-7 days	Twilight time	Master Flat	2%	<i>U'BVRIz</i>
Photom. Std.	4 quadrants	See text	Night time	Zero Point	5%	<i>U'BVRI</i>
Photom. Std. high airmass	1 quadrant	Weekly	Night time	Extinction coeff.	10%	<i>U'BVRI</i>
Astrometric fields	4	6 months	Night time	Distortion map	1 pixel	<i>R</i> filter

### 3.4.2 Science imaging

**Observation Category: SCIENCE** It is mandatory to set the Observation Category to SCIENCE in the observation template VIMOS\_img\_obs\_Offset (see Sect. 4), otherwise data will be treated as pre-imaging and will not be processed as regular imaging data.

**Rotator on sky** Users are encouraged, but not forced, to use the default value of the rotator angle, i.e., 90° .

### 3.4.3 IMG mode: calibration plan

Observations of IMG photometric standard stars during the same night as science observations are guaranteed for programs that requires photometric conditions, and performed on a best-effort basis during all clear nights. Table 12 indicates the nature, frequency and accuracy of VIMOS calibrations expected to be taken as part of the calibration plan. Only calibration frames required for the reduction of science data are reported. More calibrations will be taken by the operation staff for the purpose of maintaining and monitoring the instrument configuration and performance, e.g. mask to CCD transformations etc. These calibrations are not reported here. Calibration monitoring, including photometric zero points, can be found on the pages of the Quality Control group:

<http://www.eso.org/observing/dfo/quality/>

### 3.4.4 IMG mode: pipeline

See <http://www.eso.org/qc/pipeline-status.html> for the information concerning the latest status of the ESO pipeline.

### 3.4.5 IMG mode: Exposure Time Calculator

The approximate limiting magnitudes in direct imaging mode can be obtained from the exposure time calculator available on the ESO WEB pages <http://www.eso.org/observing/etc/>.

## 3.5 Multi-Object Spectroscopy (MOS)

### 3.5.1 Pre-imaging

Pre-imaging is mandatory for all MOS observations. Pre-imaging is carried out in service mode (see Sect. 3.4.1).

### 3.5.2 Rotator on sky

Because of the atmospheric dispersion effects (Sect. 3.2), the orientation on sky for MOS and pre-imaging observations is not a parameter set by the user, but is forced by the system to be 90°. All service and visitor mode users who have particular constraints for the orientation of their fields should request a waiver.

### 3.5.3 VIMOS Mask Preparation Software (VMMPS)

The use of VMMPS (Sect. 3.5.3) is compulsory for the creation of the so-called ADP (Aperture Definition in Pixels) files which are subsequently loaded into p2pp when preparing Observation Blocks. ADP files will be used in Paranal to manufacture the masks.

Here are some general features of VMMPS, for a quick reference guide. Consult the [VIMOS web page](#) for instructions to retrieve the package and the documentation.

- VMMPS allows to define a mask in two situations:
  - From a contributed catalogue, consisting of list of targets with accurate *relative* astrometry (better than 0.3" rms). Input catalog is a list of RA-DEC coordinates. This catalogue needs to have, with the same *relative* astrometric accuracy, coordinates of bright objects / stars in the field of view. These objects / stars, after detection on the pre-images, will be used to register the target coordinates to the VIMOS coordinate reference frame. Some of these bright stars will be used as reference for acquisition.
  - From a catalog of target positions (in pixel coordinates) **extracted from a VIMOS image**.
- VMMPS maximizes the number of slits that can be assigned to the targets in the input catalogue, in one or more masks, depending on user's choice.
- Upon realization of a first mask definition, VMMPS allows manual interaction to unselect targets, define curved slits, tilted slits, etc. However, note that manual modification of the mask definition should be done only by experienced users and with care.
- VMMPS allows to define some objects as compulsory
- VMMPS requires that some bright stars are defined as reference targets for acquisition purposes.

Figure 10 shows the VMMPS Graphical User Interface.

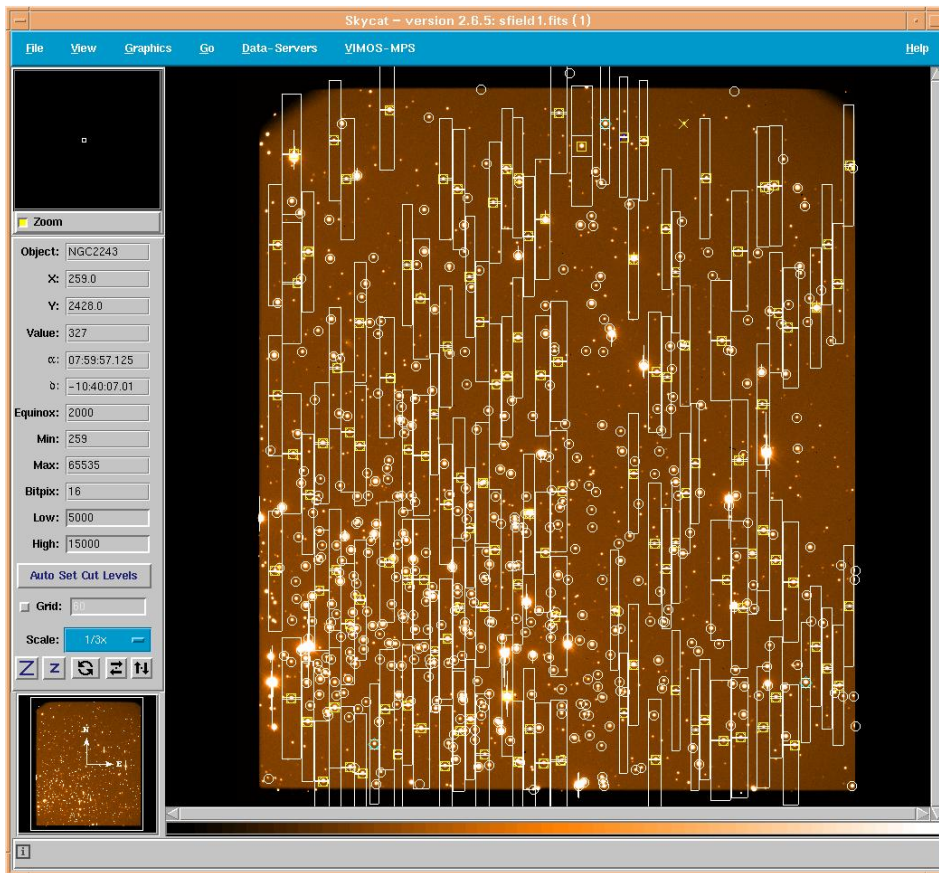


Figure 10: VMMPs Graphical User Interface: Example of ADP file superimposed to field of view

### 3.5.4 Finding charts

Finding charts for service mode OBs need to be prepared with VMMPs and show all targets with slits overplotted.

### 3.5.5 Visitors using MOS

Visitors using the MOS mode are requested to prepare Observation Blocks ahead of their scheduled visitor run, and upon completion of their pre-imaging observations (like in service mode). This is to guarantee that visitors will have a sufficient knowledge of the VIMOS Mask Preparation Software (VMMPs, Sect. 3.5.3) prior to their visit at Paranal, and to allow mask manufacturing ahead of time. Limited additional support is guaranteed for mask preparation on the mountain, up to 3 masks per night, to be prepared at least 48 hrs in advance. The instrument has a capacity of 15 masks (per quadrant) loaded simultaneously (one slot is normally occupied by a mask dedicated to observations of spectrophotometric standard stars). However, some restrictions may apply for technical reasons in the number of masks which can be hosted simultaneously into the cabinets. Until P77, only 8 masks can be simultaneously accommodated in the instrument cabinet (1 of which is the mandatory spectroscopic mask), and the same is currently foreseen for P78. *Please refer to the Call for Proposals and to the instrument WEB pages for the updated status of the instrument situation.* Note that masks cannot be exchanged at night.

### 3.5.6 MOS mode: grism+filter setup

In MOS mode only one filter+grism combination per OB is permitted (the only filter exchange allowed is the one between acquisition and science template). Users who want to observe the same targets with different filter+grism combinations are requested to submit separate OBs for different filter+grism combinations and to consider the respective overheads.

### 3.5.7 MOS mode: attached night time calibrations

To correct for instrument flexures, the use of attached nighttime arcs (see Sect. 3.5.8), is MANDATORY for all MOS OBs using LR blue and HR blue grisms, and strongly recommended for all setups. Users may also attach screen-flats. The execution time for these nighttime calibrations is always subtracted from the total allocated time.

### 3.5.8 MOS mode: calibration plan

Observations of spectro-photometric standard stars with the same used for science observations are normally performed within a few nights from the science observations.

Table 13 indicates the nature, frequency and accuracy of VIMOS calibrations expected to be taken as part of the calibration plan. Only calibration frames required for the reduction of science data are reported. More calibrations will be taken by the operation staff for the purpose of maintaining and monitoring the instrument configuration and performance, e.g. mask to CCD transformations etc. These calibrations are not reported here. Calibration monitoring data can be found on the pages of the Quality Control group:

<http://www.eso.org/observing/dfo/quality/>

Table 13: VIMOS Calibration Plan: MOS Mode

Calibration	Number	Frequency	When?	Products	Accuracy <sup>1</sup>	Comment
Bias	5	Daily	Day time	Master Bias	RON	
Darks	3	Monthly	Day time	Dark current		
Screen Flats	5	Daily	Day time	MOS Flat	5%	All used masks
Screen Arcs	1	Daily	Day time	Dispersion coeff.	0.3 pix	All used masks
Screen Arcs	1	Attached to science OB with HR or LR blue		Dispersion coeff.	0.3 pix	All used masks
Specphot. Standard Star	4 quadrants	See text	Night time	Response function	10%	All grism+filter setups used

<sup>1</sup> Internal accuracy, not considering instrument flexures (see Sect. 2.7).

**IMPORTANT NOTE** The execution time for all attached night time calibrations (screen-flats and arcs) is subtracted from the total allocated time.

### 3.5.9 MOS mode: pipeline

See <http://www.eso.org/qc/pipeline-status.html> for the information concerning the latest status of the ESO pipeline.

### 3.5.10 MOS mode: Exposure Time Calculator

The approximate limiting magnitudes in MOS mode can be obtained from the exposure time calculator available on the ESO WEB pages <http://www.eso.org/observing/etc/>.

## 3.6 Integral Field Unit (IFU)

### 3.6.1 Acquisition accuracy

In IFU mode acquisition is “blind”, i.e., limited by the accuracy of the telescope pointing ( $\sim 3''$  accuracy).

### 3.6.2 Dithering/jitter pattern

With the large field of view of the VIMOS-IFU, techniques equivalent to “shift-and-add” classically used in imaging, are a possible mode of operations. Dithering/jitter pattern is a list of differential pointing positions around a central position. Several short images (with exposure times set to have sky background limited exposures) are taken at each position of a dithering pattern, which are combined to reconstruct an image with the total required exposure time. This allows to eliminate the sky contribution, cosmic rays, the CCD fringing (particularly strong in the red), cosmetic defects on the detectors, and to produce very accurate flat fielding for correction of pixel to pixel variations. The dithering pattern depends on the mean size of the observed objects: it should be larger than the mean size of the objects for the method to work efficiently.

### 3.6.3 IFU mode: grism + filter setup

In IFU mode, only one filter+grism combination per OB is permitted. Users who want to observe the same targets with different filter+grism combinations are requested to submit separate OBs for different filter+grism combinations and to consider the respective overheads.

### 3.6.4 IFU mode: attached night time calibrations

To better take into account the effects of instrument flexure the use of attached nighttime calibrations, arcs and flats (see Sect. 3.6.5), is MANDATORY for all IFU OBs. This template will provide 1 or 3 flat-field images (for HR grism: 3 screen-flats are mandatory, for the other cases, the user can choose the number) as well as 1 arc, taken at the same rotator position of the science target. The execution time for these nighttime calibrations is always subtracted from the total allocated time.

### 3.6.5 IFU mode: calibration plan

Observations of spectro-photometric standard stars with the same used for science observations are normally performed within a few nights from the science observations. Table 14 indicates the nature, frequency and accuracy of VIMOS calibrations expected to be taken as part of the calibration plan. Only calibration frames required for the reduction of science data are reported. More calibrations will be taken by the operation staff for the purpose of maintaining and monitoring the instrument configuration and performance, e.g. mask to CCD transformations etc. These calibrations are not reported here. Calibration monitoring data can be found on the pages of the Quality Control group:

<http://www.eso.org/observing/dfo/quality/>

### 3.6.6 IFU mode: pipeline

See <http://www.eso.org/qc/pipeline-status.html> for the information concerning the latest status of the ESO pipeline.

### 3.6.7 IFU mode: Exposure Time Calculator

The approximate limiting magnitudes in IFU mode can be obtained from the exposure time calculator available on the ESO WEB pages <http://www.eso.org/observing/etc/>.

## 3.7 VIMOS overheads

The current overall efficiency of VIMOS is around 65-70% depending which mode is used. The way in which some functions are operated may change at any time. Consequently, we cannot give here an estimate of the overheads that is reliable on the long term. The user is referred to the current Call for Proposals and to the VIMOS web pages for the most updated estimate of the overheads:

<http://www.eso.org/instruments/vimos/overview.html>

Table 14: VIMOS Calibration Plan: IFU Mode

Calibration	Number	Frequency	When?	Products	Accuracy <sup>1</sup>	Comment
Bias	5	Daily	Day time	Master Bias	RON	Monitoring
Darks	3	Monthly	Day time	Dark current		
Screen Flats	3	Daily	Day time	IFU Flat with HR Orange		
Screen Arc	1	Daily	Day time	IFU Arc with HR Orange		
Screen Flats	1 to 3 <sup>2</sup>	Attached to all science OBs		IFU Flat	5%	All grism+filter setups used
Screen Arcs	1	Attached to all science OBs		Dispersion coeff.	0.3 pix	
Specphot. Standard Star	4 quadrants	See text	Night time	Response function	10%	

<sup>1</sup> Internal accuracy, not considering instrument flexures (see Sect. 2.7).

<sup>2</sup> With grism HR blue, 3 screen flats are always mandatory.

**IMPORTANT NOTE** The execution time for all attached night time calibrations (screen-flats and arcs) is subtracted from the total allocated time.

## 4 VIMOS templates

### 4.1 Introduction

This section describes the VIMOS templates. Templates are to be used during phase II for service and visitor programmes.

Templates are characterized by signatures to be filled in by the users with P2PP. Templates are grouped together to build an Observation Block (OB), which typically consists of one acquisition template and one or more observing or calibration templates. At the telescope, OBs are passed to the instrument and executed according to the user defined parameter values.

Unless specified otherwise, the information provided in this part applies to both service and visitor modes.

### 4.2 Template names

VIMOS templates are divided in groups according to the instrument mode and to the observations to be performed. This is reflected in the name of the various templates.

The template naming scheme is the following:

$$\text{VIMOS\_}<mode>\_<type>\_<description> .tsf$$

where

<i>mode</i>	is the mode of the instrument (either : <i>img</i> , <i>mos</i> , <i>ifu</i> )
<i>type</i>	is the type of the template (either: <i>acq</i> , <i>obs</i> or <i>cal</i> )
<i>description</i>	is a string identifying the purpose of the template ( <i>Offset</i> for an observation, <i>Preset</i> for a preset, <i>NightCal</i> for attached night calibrations, etc.)

### 4.3 Things to know - Reminder

- See Sect. 2.2.1 for a description of the orientation on sky of VIMOS.
- The default orientation on sky for MOS and pre-imaging templates is 90° (see Sect. 3.2). Any departure from this value should be requested with a waiver.
- Offset convention. The templates make extensive use of telescope offsets, which are entered manually as lists. The convention is that offsets are relative. In some templates, the offsets can be defined in detector coordinates (e.g. X, Y), or in RA / DEC. All offsets are to be defined in arcseconds. The offsets refer to the target. Examples are provided further down in the description of the templates.
- Only some combinations of filters and grisms are allowed. See Sect. 2.3 and Table 3.

### 4.4 List of templates

Table 15 lists the VIMOS templates.

Table 15: Science and Nighttime Calibration Templates

Type	Name
Acquisition templates	VIMOS_img_acq_Preset
	VIMOS_mos_acq_Mask
	VIMOS_mos_acq_Standard
	VIMOS_ifu_acq_Preset
Science templates	VIMOS_img_obs_Offset
	VIMOS_mos_obs_Offset
	VIMOS_ifu_obs_Offset
Calibration templates	VIMOS_img_cal_Photom
	VIMOS_img_cal_Astrom
	VIMOS_mos_cal_NightCalib
	VIMOS_mos_cal_Standard
	VIMOS_ifu_cal_NightCalib
	VIMOS_ifu_cal_Specphot

## 4.5 Acquisition templates

### 4.5.1 VIMOS\_img\_acq\_Preset

This template is used for acquisition of a field in imaging mode, for both imaging and pre-imaging OBs.

Figure 11 shows the P2PP window with an example of a pre-imaging Observing Block (OB). The coordinates of the target have to be entered in the *Target* window at the bottom of the P2PP window.

The parameters for this template are the following:

- **Filter.** This filter should be the same as for the subsequent imaging template. The available filters are: **U, B, V, R, I, z.**
- **Rotator on sky.** This parameter defines the orientation of the instrument on sky. **This parameter should always be set to '90' for pre-imaging templates, unless a waiver is requested.** The orientation corresponding to 90 degrees is such that the slits will be oriented N-S for the spectroscopic follow-up.
- **Alpha offset and Delta offset.** These are optional additional offsets in alpha and delta added to the coordinates of the object specified in the target panel at the bottom of the main p2pp window. The coordinates at the center of the instrument (i.e. the central point between the four quadrants) are the coordinates specified in the Target Package plus the offsets here specified.
- **Get Guide Star From.** Two options are offered for this parameter:
  - **CATALOGUE.** This is the default option for which the guide star will be searched through a catalog and will be selected at the telescope by the Telescope Operator. If this option is selected the subsequent fields (**Guide Star RA / DEC**) will be ignored.

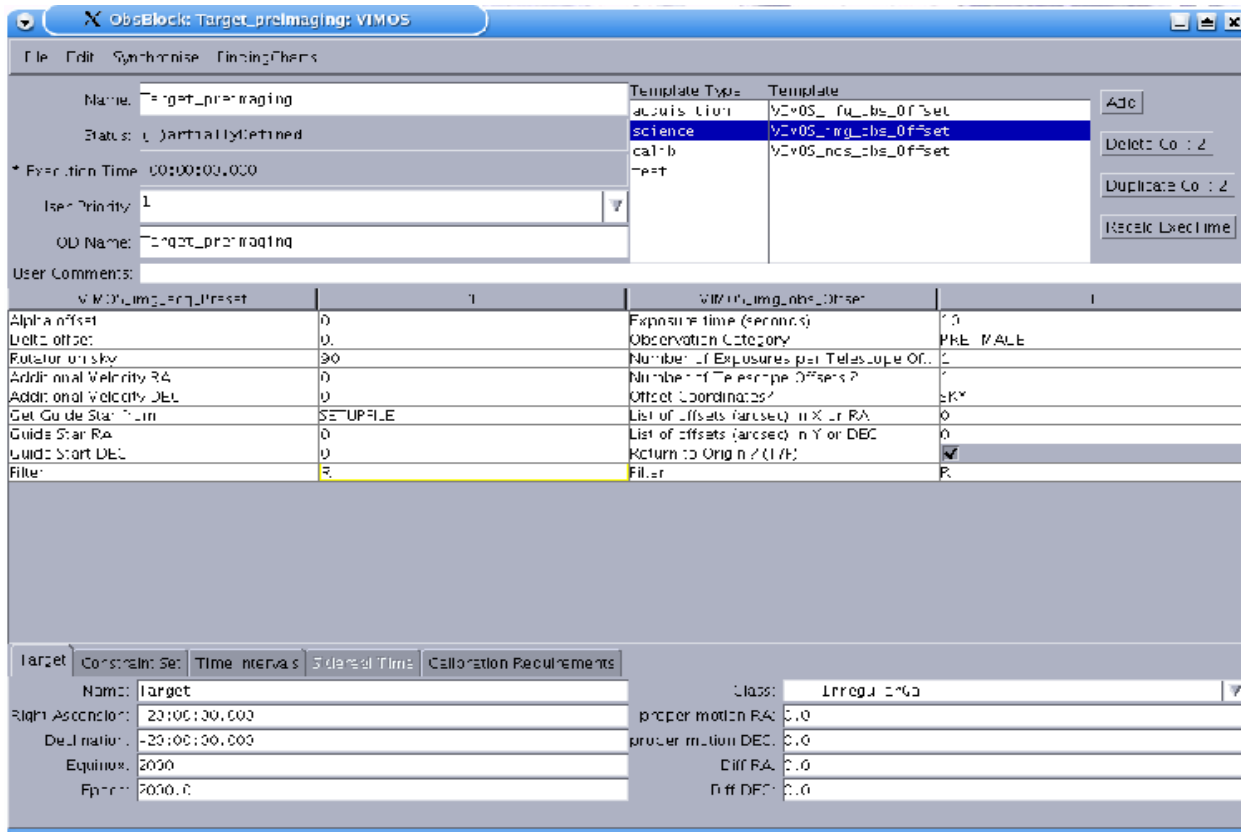


Figure 11: P2PP: example of a pre-imaging OB

– **SETUPFILE**. If this option is selected, the guide star that will be used is the one for which the coordinates are defined in the (Guide Star RA / DEC) fields. A dedicated tool (Guidecam) is delivered by ESO to help the users to determine the best possible guide star. This option is mandatory for service mode imaging and pre-imaging OBs.

- **Guide Star RA** and **Guide Star DEC**. Coordinates of the guide star when the **SETUPFILE** option of the (Get Guide Star From) field is selected.
- **Guide Star PPOS**. Position of the Guide Probe when the **SETUPFILE** option of the (Get Guide Star From) field is selected.
- **Optional additional velocity** (moving targets) in alpha and delta (**Additional Velocity RA** and **Additional Velocity DEC**). This velocity should be expressed in arcsec/sec. These parameters are mostly intended for imaging or possibly IFU programmes of moving targets. If no additional velocity is needed, these parameters should be left to their default values (0).

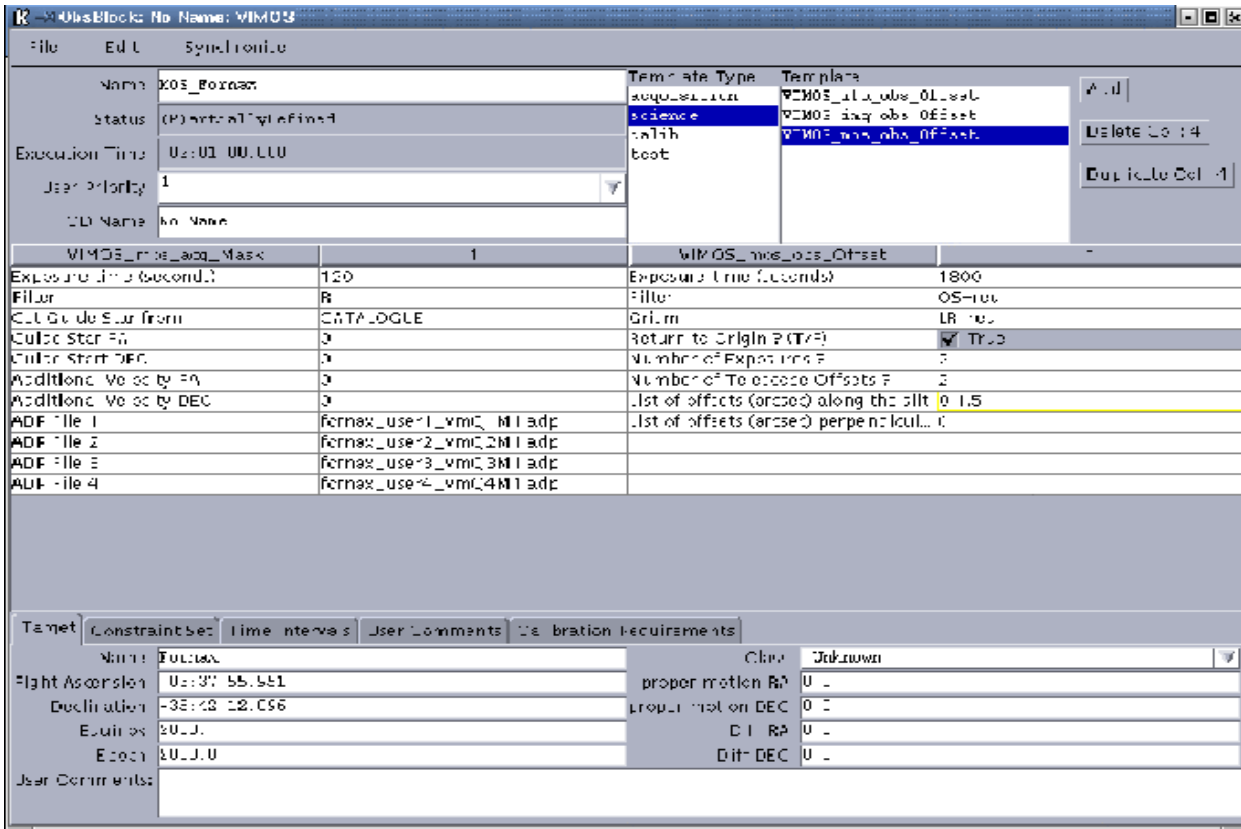


Figure 12: P2PP: Example of a MOS OB

#### 4.5.2 VIMOS\_mos\_acq\_Mask

This template is used for the acquisition of a field to be observed in MOS mode. Note that the acquisition image covers only the central  $2048 \times 2400$  pixels of each of the 4 CCDs, whereas the spectroscopic images use the full CCD size ( $2048 \times 4096$  pixels).

Preparing a MOS acquisition template requires that masks have been prepared with VMMPS. The output of VMMPS are ‘Aperture Definition Files in Pixels’ (ADP files). Information concerning the target (coordinates and equinox) are taken from the ADP files and are automatically loaded in the P2PP target package when including the first ADP file in the template.

Figure 12 shows the P2PP window with an example of a MOS Acquisition.

The parameters specific to this template are:

- **Exposure time in (seconds)**. This is the integration time for the acquisition image that will be taken through the mask to check the position of the reference stars and of the science target. A typical value is 60s, depending on the brightness of the reference stars defined with VMMPS.
- **Filter**. This filter is the one to be used for the acquisition image. **It is mandatory to choose the same filter as the one used for the pre-imaging. Waiver is requested in order to allow the selection of a different filter, but see Sect. 3.4.1 of this manual.** The available filters are: U, B, V, R, I, z, OS-blue, OS-red, GG435, GG475 and no filter.
- **Optional additional velocity (moving targets) in alpha and delta (Additional Velocity**



**Note:** differently to the mos science acquisition where the coordinate of the field come from the ADP files produced by VMMPs, the coordinates of the standard star should be set by the user in the target sub window;

**Note:** the rotator angle is fixed for this template at 90° corresponding to the set of slits in the masks being oriented N-S.

The parameters of the template are:

- **Exposure time (seconds).** This is the integration time for the acquisition image that will be taken through the mask to check its positioning.
- **Filter.** This filter is the one to be used for the acquisition image. **It is recommended to choose the right combination filter/exptime to avoid the saturation of the star in the acquisition image**

The available filters are: U, B, V, R, I, z, OS-blue, OS-red, GG435, GG475 and no filter.

- **Optional additional velocity (moving targets) in alpha and delta (Additional Velocity RA and Additional Velocity DEC).** This velocity should be expressed in arcsec/sec. These parameters are mostly intended for imaging and possibly IFU programs of moving targets and a priori unlikely to be of much use in MOS mode. If no additional velocity is needed, these parameters should be left to their default values.

#### 4.5.4 VIMOS\_ifu\_acq\_Preset

This template is for the acquisition of a field to be observed with the Integral Field Unit. Unlike the MOS acquisition template, the IFU acquisition template requires to define the filter / grism combination that will be used in the following observation template. This is to optimize the setup of the instrument at acquisition time.

The coordinates of the field at the center of the IFU need to be entered in the Target Package at the bottom left of the main P2PP window.

The parameters for this template are:

- **Filter.** This should be the same filter as the one used in the first observation template following this acquisition template. **In order to produce a valid OB, the filter in the first observation template following this acquisition template should be the same.** The available filters are: U, B, V, R, I, z, OS-blue, OS-red, GG435, GG475 and no filter.

**Only standard filter / grism combinations are allowed, as indicated in Table 3. Other combinations should be requested with a waiver.**

- **Grism.** This is the grism that is used in the first observation template following this acquisition template. **In order to produce a valid OB, the grism in the first observation template following this acquisition template should be the same.** The available grisms are: LR\_blue, LR\_red, MR, HR\_blue, HR\_orange, HR\_red.

- **IFU Magnification.** This parameter defines the sampling, and correspondingly the field of view of the IFU. The 2 available samplings are 0.67 arcsec/fiber and 0.33 arcsec/fiber. **To produce a valid OB, the magnification should be the same in**

**every template of the OB.** Observations requiring different samplings on the same field should resort to several OBs.

- **IFU Shutter.** This parameter is only meaningful when using the **LR** grisms. In **LR** spectroscopy, there are 4 rows of fibers along the dispersion direction, whereas in **MR** and **HR** modes only one 'slit' of fibers is used, hence the variation of field of view between **LR** and **MR** and **HR** modes. In case the object of interest is of limited size in **LR** mode, and if only the central  $1/4 \times 1/4$  of the field of view is needed, it is possible with the **IFU Shutter** option to mask the outer part of the IFU (always masked in **MR** and **HR** modes). This allows to avoid second order overlap due to sky and / or background objects between the 4 adjacent slits along the dispersion direction. **True** means that the shutter is in place and masks the external part of the IFU, **False** (the default value) means that the mask is not in place and the full IFU field of view is available. **To produce a valid OB, the mask shutter option should be the same in every template of the OB.** This parameter is ignored when **MR** or **HR** grisms are used.
- **Rotator on Sky.** This parameter defines the orientation of the instrument on sky. The IFU has a square geometry with the sides oriented N-S and E-W. With a rotator angle of zero the orientation of the IFU on the sky is with the North up and the East to the right. The increasing (positive) position angle on the sky (east of north) corresponds to the positive rotator angle. Therefore the value of this keyword should be equal to the desired position angle (PA) on the sky (see Fig. 4).
- **Optional additional offsets in alpha and delta (Alpha Offset and Delta offset)** with respect to the coordinates of the object. The coordinates at the center of the IFU are the coordinates specified in the Target Package plus the offsets here specified. This can be useful e.g. to define small offsets between the initial pointings on the same field over several OBs.
- **Get Guide Star From.** Two options are offered for this parameter:
  - **CATALOGUE.** This is the default option for which the guide star will be searched through a catalog and will be selected at the telescope by the Telescope Operator. If this option is selected the subsequent fields (**Guide Star RA / DEC**) will be ignored. Given that the quasi-total Nasmyth field of view is accessible to choose a guide star in IFU mode, the users can safely use this option.
  - **SETUPFILE.** If this option is selected, the guide star that will be used is the one for which the coordinates are defined in the (**Guide Star RA / DEC**) fields. As indicated above, it is unlikely that this option is required in IFU mode. Note that Guidecam tool is not intended to be used to select guide stars for the IFU mode, but only for the IMG and MOS mode of VIMOS.
- **Guide Star RA and Guide Star DEC.** Coordinates of the guide star when the **SETUP-FILE** option of the **Get Guide Star From** field is selected.
- **Optional additional velocity (moving targets) in alpha and delta (Additional Velocity RA and Additional Velocity DEC)** This velocity should be expressed in arcsec/sec. If no additional velocity is needed, these parameters should be left to their default values.

## 4.6 Science templates

### 4.6.1 VIMOS\_img\_obs\_Offset

This template is used for Imaging mode observation both for **Science** and **Pre-imaging**. The parameters of this template are the following:

- **Exposure time in (seconds)**. This is the integration time in seconds per exposure.
- **Filter**. The available filters are: **U, B, V, R, I, z**. **In order to produce a valid OB the filter in the first observation template following the acquisition template should be the same as the one selected in the acquisition template. For pre-imaging the use of R filter is mandatory.**
- **Return to Origin ? (T/F)**. This parameter defines if after a dithered set of observations the telescope will return at the position at beginning of template or not. As an example, this parameter should be set to 'T' when the aim of the OB is to execute multi-color imaging observations with the same pattern of offsets on the same field using different templates. This parameter is in general to be left to its default value in service mode. **If another value is desired in service mode a waiver should be requested.**
- **Number of Telescope Offsets?**. This parameter defines the number of telescope offsets during the template. The number of exposures taken at each telescope position is determined by the next parameter (**Number of exposures per telescope offset ?**). The pattern of offsets is defined in the parameters (**List of offsets (arcsec) in X or RA**) and (**List of offsets (arcsec) in Y or DEC**). Offsets are defined relative to the previous telescope position.
- **Number of exposures per telescope offset ?**. This parameter defines how many exposures are taken at each offset position.
- **Offset coordinates?**. This parameter defines the coordinate system used to define telescope offsets. If the **SKY** option is selected, telescope offsets are in RA and DEC, if **DETECTOR** is selected, telescope offsets are in X and Y on the detector. In both cases the offsets are given in **arcsec**.
- **List of offsets (arcsec) in X or RA and List of offsets (arcsec) in Y or DEC**. List of offsets between exposures. Offsets are defined relative to the previous telescope position. The offsets are defined in RA/DEC or X/Y on detector depending on which option is selected for the (**Offset coordinates**) field. If the first image is to be taken at the preset coordinates, the first set of offsets should be 0,0. If there are less offset values than the defined number of offset positions, the template will return at the beginning of the list of offsets and apply them again.

For example, if 5 telescopes offsets are defined (number of telescope offsets?) together with the following series of offsets:

RA or X	0	-10	-5
DEC or Y	2	7	

the offsets applied to the telescope will be:

RA or X	0	10	5	0	10
DEC or Y	-2	-7	-2	-7	-2

(i.e., if SKY option for coordinates is used: after the preset the first offset will be applied to place the target at 2 arcsec North (0 offset in RA) and then the first exposure will be taken; after that the target will be moved further 10 arcsec West and 7 arcsec North with respect to the position of the previous exposure, etc. until the number of exposures is reached. If DETECTOR option is used the first exposure will be taken at pixels  $x = 0$   $y = 10$  (offset is 2", which is approximately 10 pixels), then the target will be moved further 10" West and 7" North with respect to the position of the previous exposure, etc., until the number of exposures is reached.)

- **Observation Category.** **PRE-IMAGE** is for a pre-imaging program, **SCIENCE** is for a regular science imaging program.

**It is critical that users define PRE-IMAGE for pre-imaging programs.** Failure to do so will result in slow processing and delivery (possibly till the end of the period) of the data.

#### 4.6.2 VIMOS\_mos\_obs\_Offset

The parameters of this template are:

- **Exposure time in (seconds).** This is the integration time in seconds per exposure.
- **Filter.** The available filters are: **U, B, V, R, I, z, OS-blue, OS-red, GG435, GG475** and no filter. The standard grism / filter configurations are given in Table 3. **Only standard filter / grism combinations are allowed, as indicated in Table 3. Other combinations should be requested with a waiver.**
- **Grism.** The available grisms are: **LR\_blue, LR\_red, MR, HR\_blue, HR\_orange, HR\_red.**
- **Return to Origin ? (T/F).** This parameter defines if after a dithered set of observations the telescope will return at the position at beginning of template or not. **This parameter is in general to be left in the default value in service mode. If another value is desired in service mode a waiver should be requested.**
- **Number of Telescope Offsets?.** This parameter defines the number of telescope offsets during the template. The number of exposures taken at each telescope position is determined by the next parameter (Number of exposures per telescope offset ?). The pattern of offset is defined in the List of offsets (arcsec) along the slit and List of offsets (arcsec) perpendicular to the slit parameters.
- **Number of exposures per telescope offset ?.** This parameter defines how many exposures are taken at each offset position.

- **List of offsets (arcsec) along the slit and List of offsets (arcsec) perpendicular to the slit.** Offsets are defined relative to the previous telescope position. Offsets are defined in detector coordinates, along or perpendicular to the slits. Usually, only offsets along the slits need to be defined. If the first image is to be taken at the preset coordinates, the first set of offset should be 0,0. If there are less offset values than the required number of offset position, the template will return at the beginning of the list of offsets and apply them again.

For example, if 3 telescope offsets are defined (**Number of Telescope Offsets?**) together with the following series of offsets:

List of offsets (arcsec) along the slit	-1	2	0
List of offsets (arcsec) perpendicular to the slit	0		

the offsets applied to the telescope will be:

Offsets (arcsec) along the slit	1	-2	0
Offsets (arcsec) perpendicular to the slit	0	0	0

(i.e., the first exposure is taken at  $-1''$  from the pointing position along the slit, then the second exposure is taken  $2''$  up along the slit with respect to the previous exposure, and the third exposure is taken at the same position as the second.)

### 4.6.3 VIMOS\_ifu\_obs\_Offset

This template is to be used for observation with the Integral Field Unit. The parameters of this template are:

- **Exposure time in (seconds).** This is the integration time in seconds per exposure.
- **Filter.** The available filters are: **U, B, V, R, I, z, OS-blue, OS-red, GG435, GG475** and no filter. **Only standard filter / grism combinations are allowed, as indicated in Table 3. Other combinations should be requested with a waiver.**
- **Grism.** The available grisms are: **LR\_blue, LR\_red, MR, HR\_blue, HR\_orange, HR\_red.**

**In order to produce a valid OB the filter and the grism in the first observation template following the acquisition template should be the same as the one selected in the acquisition template.**

- **IFU Magnification.** This parameter defines the sampling, and correspondingly the field of view of the IFU. The 2 available samplings are 0.67 arcsec/fiber and 0.33 arcsec/fiber. **To produce a valid OB, the magnification should be the same in every template of the OB.**

- **IFU Shutter.** This parameter is only meaningful when using the **LR** grisms. In **LR** spectroscopy, there are 4 rows of fibers along the dispersion direction, whereas in **MR** and **HR** modes only one 'slit' of fibers is used, hence the variation of field of view between **LR** and **MR** and **HR** modes. In case the object of interest is of limited size in **LR** mode, and if only the central  $1/4 \times 1/4$  of the field of view is needed, it is possible with the **IFU Shutter** option to mask the outer part of the IFU (always masked in **MR** and **HR** modes). This allows to avoid second order overlap due to sky and / or background objects between the 4 adjacent slits along the dispersion direction. **True** means that the shutter is in place and masks the external part of the IFU, **False** (the default value) means that the mask is not in place and the full IFU field of view is available. **To produce a valid OB, the mask shutter option should be the same in every template of the OB.** This parameter is ignored when **MR** or **HR** grisms are used.
- **Return to Origin ? (T/F).** This parameter defines if after a dithered set of observations the telescope will return at the reference position or not. This parameter is in general to be left in the default value (T) in service mode. **If another value is desired in service mode a waiver should be requested.**
- **Number of Telescope Offsets?.** This parameter defines the number of telescope offsets during the template. The number of exposures taken at each telescope position is determined by the next parameter (**Number of exposures per telescope offset ?**). The pattern of offset is defined in the **List of offsets (arcsec) CORRECT LABEL** and **List of offsets (arcsec) CORRECT LABEL** parameters.
- **Number of exposures per telescope offset ?.** This parameter defines how many exposures are taken for each offset position.
- **List of offsets (arcsec)** List of offsets between exposures. Offsets are defined relative to the previous telescope position. The offsets are defined in RA/DEC.

If the first image is to be taken at the preset coordinates, the first set of offset should be 0,0. If there are less offset values than the defined number of offset positions, the template will return at the beginning of the list of offsets and apply them again.

For example, if 5 telescope offsets are defined (**Number of Telescope Offsets?**) together with the following series of offsets (in RA/DEC):

RA	0	-10	-5
DEC	0	5	10

the offsets applied to the telescope will be (see also Sect. 4.6.1):

RA	0	10	5	0	10
DEC	0	-5	-10	0	-5

## 4.7 Calibration Templates

### 4.7.1 VIMOS\_img\_cal\_Photom

This template is for acquisition of photometric data (zero points) in Imaging mode. The acquisition template to use with this template is VIMOS\_img\_acq\_Preset. The coordinates to define in the acquisition template are those of the standard star / field. Offsets from these coordinates to position the star / field in one or the four quadrants of the instrument will be applied automatically by the template.

The parameters of this template are:

- **Exposure time (seconds)**. This is the integration time in seconds per exposure.
- **Filter**. The available filters are: **U, B, V, R, I, z**. **To produce a valid calibration OB the filter in the first observation template following the acquisition template should be the same as the one in the acquisition template.**
- **Number of exposures per telescope offset ?**. This parameter defines how many exposures are taken at each offset position (1 or 4).
- **1 or 4 quadrants**. This parameter allows to define if the standard star image will be taken in 1 or 4 quadrants. If the **1 quadrant** option is selected, the standard star field will be positioned in only one quadrant by applying an appropriate offset from the coordinates of the star / field defined in the target package of the acquisition template.

If the **4 quadrant** option is selected, the standard star field will be positioned sequentially in the 4 quadrants by applying the appropriate offsets from the coordinates of the star / field defined in the target package of the acquisition template.

As many exposures as defined in (**Number of exposures per telescope offset ?**) will be taken at each telescope position (1 or 4).

At the end of the template the telescope will offset again to return to its position at the beginning of the template.

### 4.7.2 VIMOS\_img\_cal\_Astrom

This template is for acquisition of astrometric data in Imaging mode. The acquisition template to use with this template is VIMOS\_img\_acq\_Preset. The coordinates to define in the acquisition template are those of the astrometric field. Offsets from these coordinates to position the field in one or the four quadrants of the instrument will be applied automatically by the template.

The parameters of the template are:

- **Exposure time (seconds)**. This is the integration time in seconds per exposure.
- **Filter**. The available filters are: **U, B, V, R, I, z**. **To produce a valid calibration OB the filter in the first observation template following the acquisition template should be the same as the one in the acquisition template.**
- **Number of exposures per telescope offset ?**. This parameter defines how many exposures are taken at each offset position (1 or 4).

- **1 or 4 quadrants.** This parameter allows to define if the astrometric field image will be taken in 1 or 4 quadrants. If the **1 quadrant** option is selected, the astrometric field will be positioned in only one quadrant by applying an appropriate offset from the coordinates of the field defined in the target package of the acquisition template.

If the **4 quadrant** option is selected, the astrometric field will be positioned sequentially in the 4 quadrants by applying the appropriate offsets from the coordinates of the field defined in the target package of the acquisition template.

As many exposures as defined in (**Number of exposures telescopes offset ?**) will be taken at each telescope position (1 or 4).

At the end of the template the telescope will offset again to return to its position at the beginning of the template.

### 4.7.3 VIMOS\_mos\_cal\_NightCalib

This template is to be used when screen flats or wavelength calibrations are needed during the night right after a science observation. **This template doesn't contain any setup definition and the data will be taken with exactly the same instrument setup as used in the previous science template.**

This template is to be used in a science OB **after** a science templates. It can not be used alone in an OB after an acquisition template. The exposure time parameters are automatically defined by the current instrument setup. The parameters of the template are:

- **Night Flat Field ?** (T/F). If set to 'T', 3 screen flats will be taken.
- **Night Arc ?** (T/F). If 'T' an arc spectrum will be taken.

### 4.7.4 VIMOS\_mos\_cal\_Standard

This template is used for the observation of a standard star in mode MOS. This template can only be used following the VIMOS\_mos\_acq\_Standard acquisition template and **not** using the VIMOS\_mos\_acq\_Mask. This template can only use the specifically designed standard mask from the repository.

The parameters of this template are:

- **Exposure time (seconds).** This is the integration time in seconds per exposure.
- **Filter.** The available filters are: **U, B, V, R, I, z, OS-blue, OS-red, GG435, GG475.**
- **Grism.** The available grisms are: **LR\_blue, LR\_red, MR, HR\_blue, HR\_orange, HR\_red.**
- **Number of exposures per telescope offset ?.** This parameter defines how many exposures are taken for each offset position.
- **1 or 4 quadrants?.** This determines whether the standard star will be positioned in one or four of the quadrants of the instrument. As many exposures as defined in (**Number of exposures per telescope offset ?**) will be taken at each telescope position (1 or 4).

- **Slit Width.** Define which of the slits available in the masks will be used. The width of the available slits are: **0.8, 1.0, 1.2, 1.5, 1.8, 2.0, 2.5, 5.0**. Once the user select the slit width the rest is totally automatic; the star will be offset from the acquisition box to the selected slit in the first quadrant and then moved to the same slit in the other quadrants.

#### 4.7.5 VIMOS\_ifu\_cal\_Specphot

This template is used for the observation of a spectrophotometric standard star in IFU mode. It is to be used in a OB with the VIMOS\_ifu\_acq.Preset acquisition template.

The parameters of the template are:

- **Exposure time (seconds).** This is the integration time in seconds per exposure.
- **Filter.** The available filters are: **U, B, V, R, I, z, OS-blue, OS-red, GG435, GG475**.
- **Grism.** The available grisms are: **LR\_blue, LR\_red, MR, HR\_blue, HR\_orange, HR\_red**.

**In order to produce a valid OB the filter and the grism in the first observation template following the acquisition template should be the same as the one selected in the acquisition template.**

- **IFU Magnification.** This parameter defines the sampling, and correspondingly the field of view of the IFU. The 2 available samplings are 0.67 arcsec/fiber and 0.33 arcsec/fiber.  
**To produce a valid OB, the magnification should be the same in every template of the OB.**

- **IFU Shutter.** This parameter is only meaningful when using the **LR** grisms. In **LR** spectroscopy, there are 4 rows of fibers along the dispersion direction, whereas in **MR** and **HR** modes only one 'slit' of fibers is used, hence the variation of field of view between **LR** and **MR** and **HR** modes. In case the object of interest is of limited size in **LR** mode, and if only the central  $1/4 \times 1/4$  of the field of view is needed, it is possible with the **IFU Shutter** option to mask the outer part of the IFU (always masked in **MR** and **HR** modes). This allows to avoid second order overlap due to sky and / or background objects between the 4 adjacent slits along the dispersion direction. **True** means that the shutter is in place and masks the external part of the IFU, **False** (the default value) means that the mask is not in place and the full IFU field of view is available. **To produce a valid OB, the mask shutter option should be the same in every template of the OB.** This parameter is ignored when **MR** or **HR** grisms are used.

- **Number of exposures per telescope offset ?.** This parameter defines how many exposures are taken for each offset position.
- **1 or 4 quadrants?.** This determines whether the standard star / field will be positioned in one or four of the quadrants of the IFU. As many exposures as defined in (Number of exposures per telescope offset ?) will be taken at each telescope position (1 or 4).

#### 4.7.6 VIMOS\_ifu\_cal\_NightCalib.

This template is to be used when screen flats or wavelength calibrations are needed during the night right after a science observation. **This template doesn't contain any setup definition and the data will be taken with exactly the same instrument setup as used in the previous observation template.**

This template is to be used in a science OB **after** observation templates. It can not be used alone in an OB after an acquisition template. The exposure time parameters are automatically defined by the instrument setup. The parameters of the template are:

- Night Flat Field ? (T/F). If set to 'T', 3 screen flats will be taken.
- Night Arc ? (T/F). If 'T' an arc spectrum will be taken.

## A VIMOS Filters

Table 16 lists the characteristics of the VIMOS filters. The transmission curves are given in the following figures.

Table 16: Characteristics of the VIMOS filters

Filter	$\lambda_0$ (nm)	FWHM (nm)
U'	370	50
B_BESS	430	97.0
V_BESS	546	89.0
R_BESS	648.5	130.0
I	830	80.0
z_GUNN	950	160
GG475	edge filter	high pass (> 475 nm)
GG435	edge filter	high pass (> 435 nm)
OS-red	box filter	band pass 550-950
OS-blue	box filter	band pass 370-670

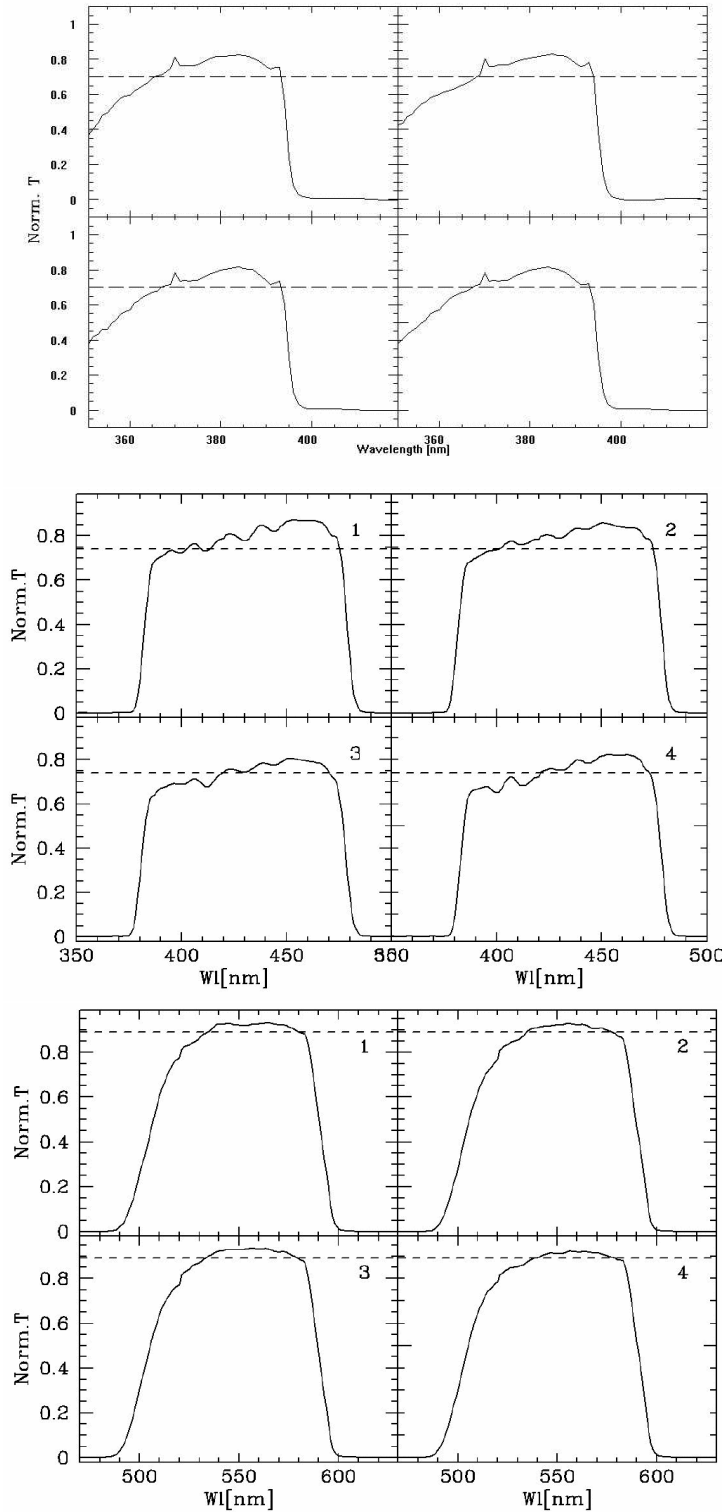


Figure 14: U, B, V filter transmission curves

## B VIMOS Grisms

This appendix contains the efficiency curves of all standard grisms available for VIMOS and the approximate wavelength range for a slit which is located in the field centre.

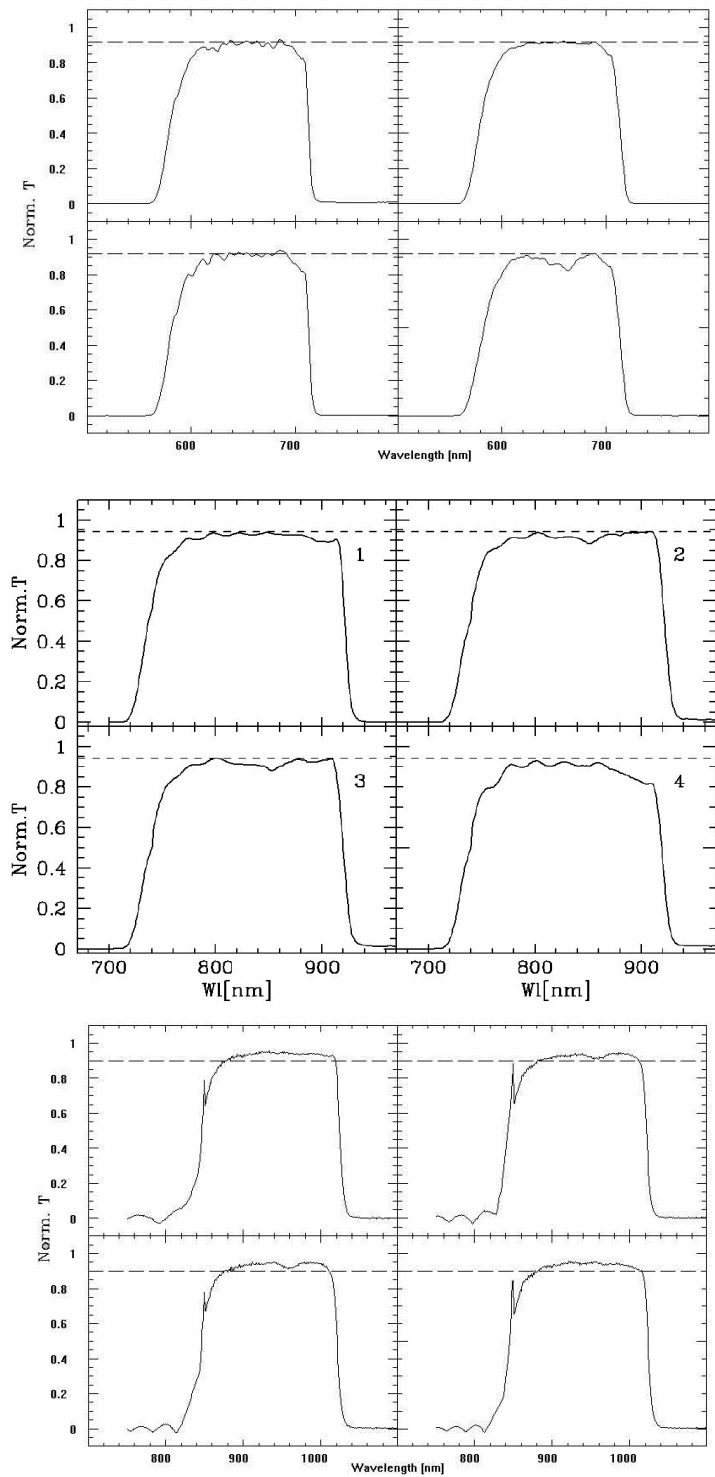


Figure 15: R,I,z filter transmission curves

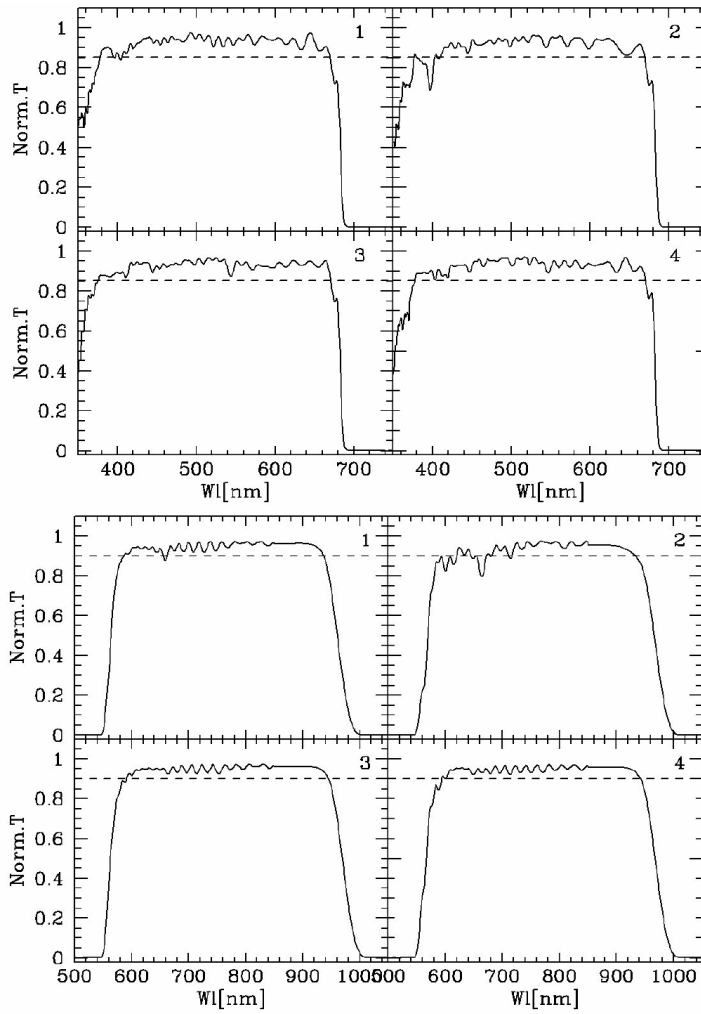


Figure 16: OS-blue, OS-red transmission curves

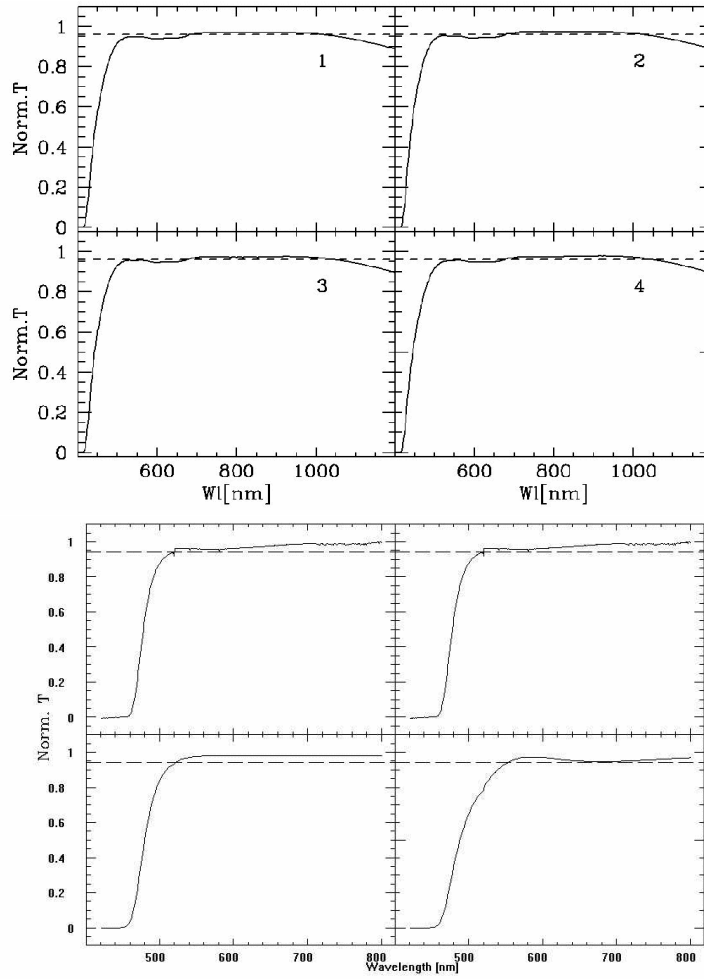


Figure 17: GG435, GG475 transmission curves

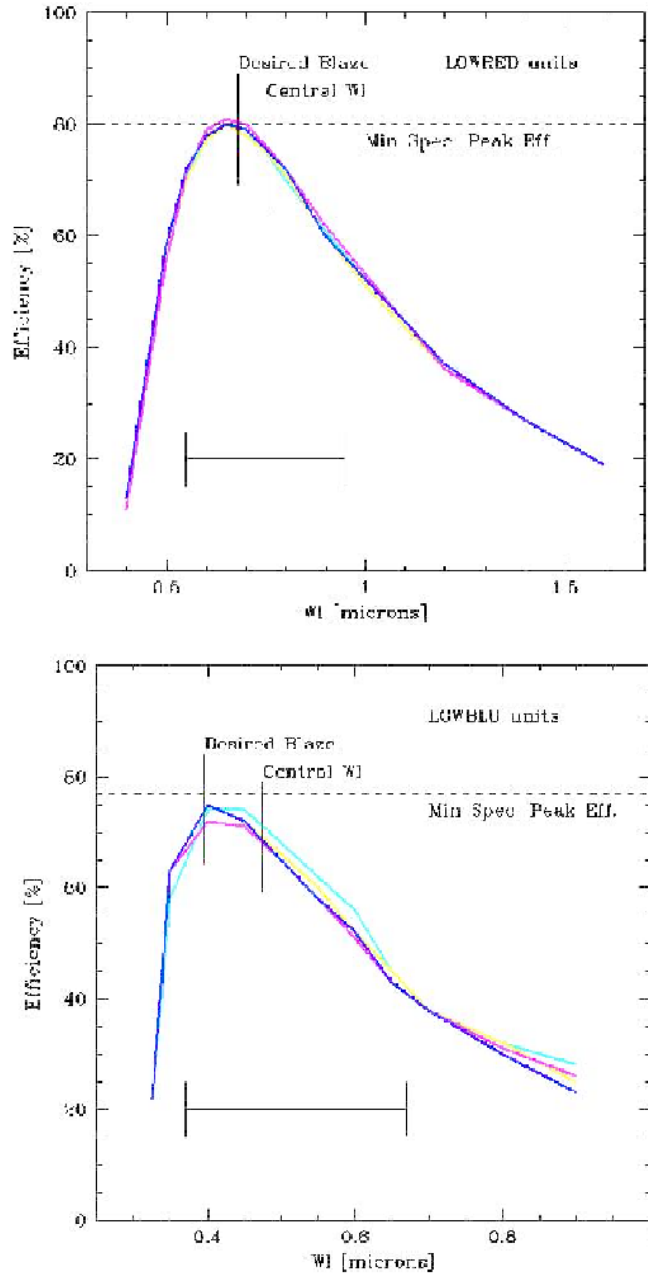


Figure 18: Efficiency curve of the low resolution gratings LR-red, LR-blue. The vertical lines mark the desired blaze and the central wavelengths. The spectral range refers to the slit in the center of the field. The cutoff wavelength is in most cases given by the order separation filters, the red CCD limit or the limit of the VIMOS optics in the blue.

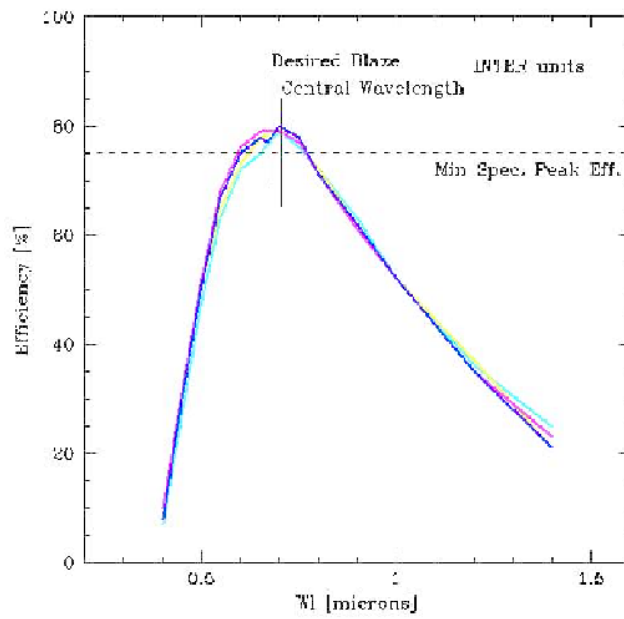


Figure 19: Efficiency curve of the medium resolution grisms MR. The vertical lines mark the desired blaze and the central wavelengths. The spectral range refers to the slit in the center of the field. The cutoff wavelength is in most cases given by the order separation filters, the red CCD limit or the limit of the VIMOS optics in the blue.

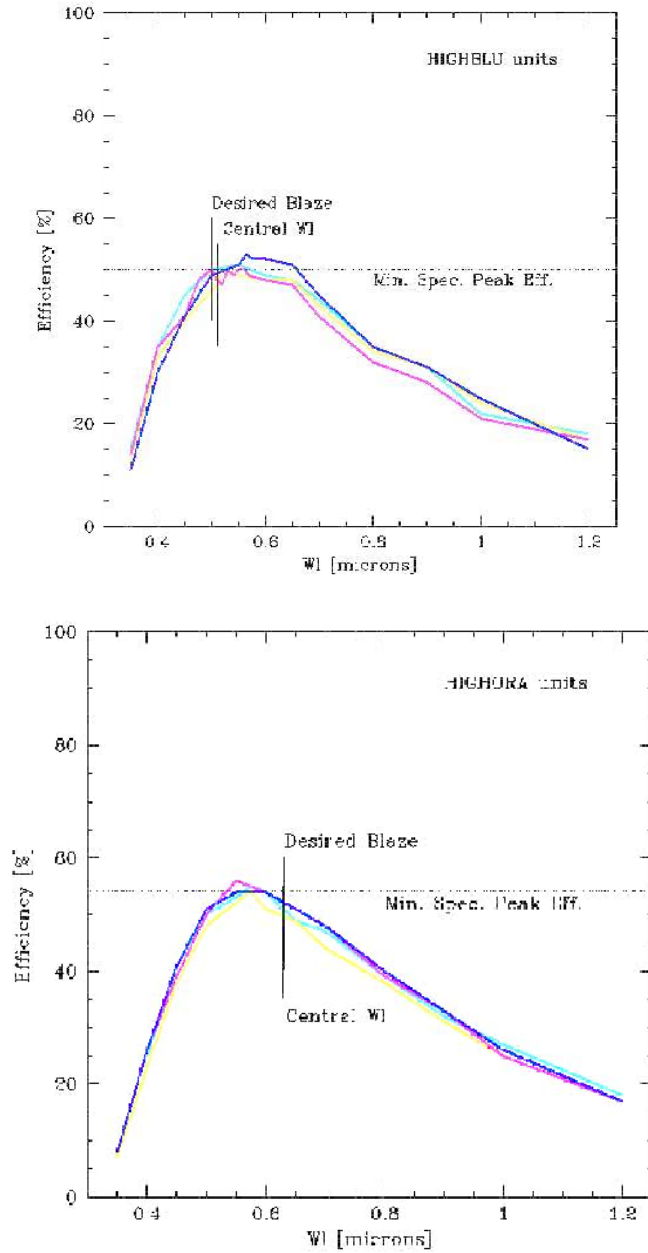


Figure 20: Efficiency curve of the high resolution grisms HR-blue, HR-orange. The vertical lines mark the desired blaze and the central wavelengths. The spectral range refers to the slit in the center of the field. The cutoff wavelength is in most cases given by the order separation filters, the red CCD limit or the limit of the VIMOS optics in the blue.

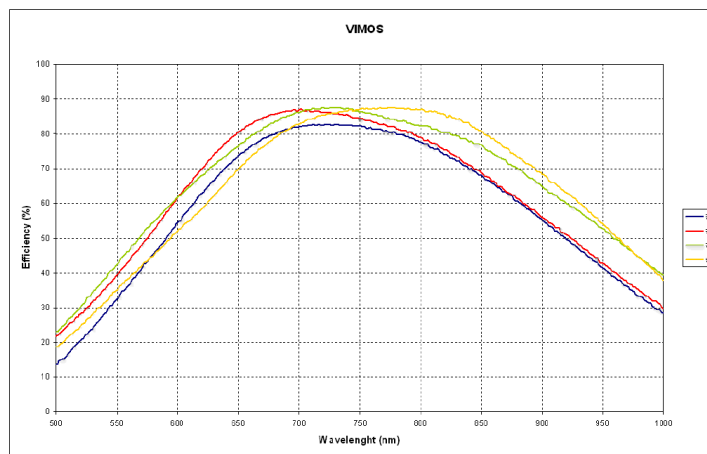


Figure 21: Efficiency curve of the high resolution grisms HR-red VPHG. The spectral range and efficiency refers to the slit in the center of the field. The cutoff wavelength is in most cases given by the order separation filters, the red CCD limit or the limit of the VIMOS optics in the blue.

## C Template Signature Files for Observation and Acquisition.

### C.1 Acquisition Templates

The following tables list the parameters of the VIMOS acquisition templates.

VIMOS_img_acq_Preset		
Keyword	Range	Label in p2pp
INS.FILT.NAME	U B V R I z	Filter
TEL.ROT.OFFANGLE	-180 .. 180	Rotator on sky
TEL.TARG.OFFSETALPHA	-3600000 .. 3600000	Alpha Offset
TEL.TARG.OFFSETDELTA	-3600000 .. 3600000	Delta Offset
TEL.AG.GUIDESTAR	SETUPFILE CATALOGUE	Get Guide Star From
TEL.GS1.ALPHA	0..240000	Guide Star RA
TEL.GS1.DELTA	-900000 .. 900000	Guide Star Dec
TEL.GS1.PPOS	POS NEG	Guide Probe Position
TEL.TARG.ALPHA		RA of the Field Center
TEL.TARG.DELTA		DEC of the Field Center
TEL.TARG.EQUINOX	-2000...3000	Equinox
TEL.TARG.EPOCH	-2000...3000	Epoch
TEL.TARG.PMA	-10..10	proper Motion Alpha
TEL.TARG.PMD	-10..10	proper Motion Delta
TEL.TARG.ADDVELALPHA	-15..15	Additional Velocity RA
TEL.TARG.ADDVELDELTA	-15..15	Additional Velocity DEC

VIMOS_mos_acq_Mask		
Keyword	Range	Label in p2pp
DET.WIN1.UIT1	1..1000000	Exposure time (seconds)
INS.FILT.NAME	U B V R I z	Filter
TEL.AG.GUIDESTAR	SETUPFILE CATALOGUE	Get Guide Star From
TEL.GS1.ALPHA	0..240000	Guide Star RA
TEL.GS1.DELTA	-900000 .. 900000	Guide Star Dec
INS.ADP1	file name	Name of 1st quadrant ADP File
INS.ADP2	file name	Name of 2nd quadrant ADP File
INS.ADP3	file name	Name of 3rd quadrant ADP File
INS.ADP4	file name	Name of 4th quadrant ADP File
TEL.TARG.EQUINOX	-2000...3000	Equinox
TEL.TARG.EPOCH	-2000...3000	Epoch
TEL.TARG.PMA	-10..10	proper Motion Alpha
TEL.TARG.PMD	-10..10	proper Motion Delta
TEL.TARG.ADDVELALPHA	-15..15	Additional Velocity RA
TEL.TARG.ADDVELDELTA	-15..15	Additional Velocity DEC

VIMOS_ifu_acq_Preset		
Keyword	Range	Label in p2pp
DET.WIN1.UIT1	1..1000000	Exposure time (seconds)
INS.FILT.NAME	U B V R I z OS-red OS-blue GG435 GG475	Filter
INS.GRIS.NAME	LR_blue, LR_red, MR, HR_blue, HR_orange, HR_red	Grism
TEL.TARG.ALPHA		RA of the Field Center
TEL.TARG.DELTA		DEC of the Field Center
TEL.TARG.EQUINOX	-2000.3000	Equinox
TEL.TARG.EPOCH	-2000...3000	Epoch
TEL.TARG.PMA	-10..10	proper Motion Alpha
TEL.TARG.PMD	-10..10	proper Motion Delta
TEL.ROT.OFFANGLE	-180 .. 180	Rotator on sky
TEL.TARG.OFFSETALPHA	-3600000..3600000	Alpha Offset
TEL.TARG.OFFSETDELTA	-3600000..3600000	Delta Offset
TEL.AG.GUIDESTAR	SETUPFILE CATALOGUE	Get Guide Star From
TEL.GS1.ALPHA	0..240000	Guide Star RA
TEL.GS1.DELTA	-900000 .. 900000	Guide Star Dec
INS.IFUE.NAME	0.33, 0.67	IFU magnification in (arcsec/fiber)
INS.IFUS.MODE	F T	IFU Shutter ?
TEL.TARG.ADDVELALPHA	-15..15	Additional Velocity RA
TEL.TARG.ADDVELDELTA	-15..15	Additional Velocity DEC

## C.2 Observation Templates

VIMOS_img_obs_Offset		
Keyword	Range	Label in p2pp
DET.WIN1.UIT1	1..1000000	Exposure time (seconds)
INS.FILT.NAME	U B V R I z	Filter
SEQ.NEXPO	1..1000000	Number of exposure per telescope offset
SEQ.NOFF	1..1000000	Number of telescope offsets
SEQ.RETURN	F T	Return to Origin ? (T/F)
SEQ.OFFSET.COORDS	SKY DETECTOR	Offset Coordinates ?
SEQ.OFFSET1.LIST		List of offsets (arcsec) in X or RA
SEQ.OFFSET2.LIST		List of offsets (arcsec) in Y or DEC
SEQ.CATG	PRE-IMAGE SCIENCE	Observation Category

## C.3 Template Signature Files for Calibrations

VIMOS_mos_obs_Offset		
Keyword	Range	Label in p2pp
DET.WIN1.UIT1	1..100000	Exposure time (seconds)
INS.FILT.NAME	U B V R I z OS-red OS-blue GG435 GG475	Filter
INS.GRIS.NAME	LR_blue, LR_red, MR, HR_blue, HR_orange, HR_red	Grism
SEQ.NEXPO	1..1000000	Number of exposure per telescope offset
SEQ.NOFF	1..1000000	Number of telescope offsets
SEQ.RETURN	F T	Return to Origin ? (T/F)
SEQ.OFFSET1.LIST		List of offsets along the slit (arcsec)
SEQ.OFFSET2.LIST		List of offsets perpendicular to the slit (arcsec)

VIMOS_ifu_obs_Offset		
Keyword	Range	Label in p2pp
DET.WIN1.UIT1	1..100000	Exposure time (seconds)
INS.FILT.NAME	U B V R I z OS-red OS-blue GG435 GG475	Filter
INS.GRIS.NAME	LR_blue, LR_red, MR, HR_blue, HR_orange, HR_red	Grism
INS.IFUE.NAME	0.33, 0.67	IFU magnification in (arcsec/fiber)
INS.IFUS.MODE	F T	IFU Shutter ?
SEQ.NEXPO	1..1000000	Number of exposure per telescope offset
SEQ.NOFF	1..1000000	Number of telescope offsets
SEQ.RETURN	F T	Return to Origin ? (T/F)
SEQ.OFFSET.COORDS	SKY LENSLET	Offset Coordinates ?
SEQ.OFFSET1.LIST		List of offsets (arcsec) in X or RA
SEQ.OFFSET2.LIST		List of offsets (arcsec) in Y or DEC

VIMOS_img_cal_Photom		
Keyword	Range	Label in p2pp
DET.WIN1.UIT1	1..100000	Exposure time (seconds)
INS.FILT.NAME	U B V R I z	Filter
SEQ.NEXPO	1..1000000	Number of exposure per telescope offset ?
SEQ.CAL.FLAG	1 4	1 or 4 quadrants?

VIMOS_img_cal_Astrom		
Keyword	Range	Label in p2pp
DET.WIN1.UIT1	1..100000	Exposure time (seconds)
INS.FILT.NAME	U B V R I z	Filter
SEQ.NEXPO	1..1000000	Number of exposure per telescope offset ?
SEQ.CAL.FLAG	1 4	1 or 4 quadrants?

VIMOS_mos_cal_NightCalib		
Keyword	Range	Label in p2pp
SEQ.FLATFIELD	F T	Night Flat Field?
SEQ.ARC	F T	Night Arc?
SEQ.FLATFIELD.NEXPO	1..1000000	No. of screenflats?

VIMOS_mos_acq_Standard		
Keyword	Range	Label in p2pp
DET.WIN1.UIT1	1..1000000	Exposure time (seconds)
INS.FILT.NAME	U B V R I z	Filter
TEL.TARG.EQUINOX	-2000...3000	Equinox
TEL.TARG.EPOCH	-2000...3000	Epoch
TEL.TARG.PMA	-10..10	proper Motion Alpha
TEL.TARG.PMD	-10..10	proper Motion Delta
TEL.TARG.ADDVELALPHA	-15..15	Additional Velocity RA
TEL.TARG.ADDVELDELTA	-15..15	Additional Velocity DEC

VIMOS_mos_cal_Standard		
Keyword	Range	Label in p2pp
DET.WIN1.UIT1	1..100000	Exposure time (seconds)
INS.FILT.NAME	U B V R I z OS-red OS-blue GG435 GG475	Filter
INS.GRIS.NAME	LR_blue, LR_red, MR, HR_blue, HR_orange, HR_red	Grism
INS.SLIT.NAID	0.8,1.0,1.2,1.5, 1.8, 2, 2.5, 5.0	1.0
SEQ.NEXPO	1..1000000	Number of exposure per telescope offset ?
SEQ.CAL.FLAG	1 4	1 or 4 quadrants ?

VIMOS_ifu_cal_Specphot		
Keyword	Range	Label in p2pp
DET.WIN1.UIT1	1..100000	Exposure time (seconds)
INS.FILT.NAME	U B V R I z OS-red OS-blue GG435 GG475	Filter
INS.GRIS.NAME	LR_blue, LR_red, MR, HR_blue, HR_orange, HR_red	Grism
INS.IFUE.NAME	0.33, 0.67	IFU magnification in (arcsec/fiber)
INS.IFUS.MODE	F T	IFU Shutter ?
SEQ.NEXPO	1..1000000	Number of exposure per telescope offset ?
SEQ.CAL.FLAG	1 4	1 or 4 quadrants ?

VIMOS_ifu_cal_NightCalib		
Keyword	Range	Label in p2pp
SEQ.FLATFIELD	F T	Night Flat Field ?
SEQ.ARC	F T	Night Arc ?
SEQ.FLATFIELD.NEXPO	1..1000000	No. of screenflats?

## D Abbreviations and Acronyms

The following abbreviations and acronyms are used in this manual:

ACQ	Acquisition
ADP	Aperture Definition in Pixels
ADU	Analogue-to-Digital Unite
CCD	Charge Coupled Device
DEC	Declination
ESO	European Southern Observatory
ETC	Exposure Time Calculator
FEU	Filter Exchange Unit
FIERA	Fast Imager Electronic Readout Assembly
FWHM	Full Width Half Maximum
GEU	Grism Exchange Unit
HR	High Resolution
IFU	Integral Field Unit
IMG	Imaging
MEU	Mask Exchange Unit
MOS	Multi Object Spectroscopy
OB	Observation Block
OS	Order Sorting
PSF	Point Spread Function
P2PP	Phase 2 Proposal Preparation
RA	Right Ascension
RMS	Root Mean Square
RON	Read Out Noise
TSF	Template Signature File
VIMOS	Visible Multi-Object Spectrograph
VMMPS	Vimos Mask-Manufacturing Preparation Software
VLT	Very Large Telescope
Å	Ångstrom
$e^-$	Electron
cm	Centimeter
h	Hour
kpx	KiloPixel
min	Minute
mm	Millimeter
nm	Nanometer
px	Pixel
s	Second
$\mu\text{m}$	Micrometer